ENGINEERING MANUAL

FDA Approved Materials & Components

20 20 1 CO

Fast, Simple to Use Online Configurator

Rapid Deliveries

Certified Conveyors



Stainless Steel Conveyors for Dry, Wipe Down and Wet Applications





Sleek, Low Profile Design

- Quick, five-minute belt change for increased uptime
- Bolt slider mechanism for fast, single point belt tensioning
- V-Groove frame with V-Guided belt ensures accurate tracking
- Streamlined design fits where other conveyors do not
- Low profile, robust welded frame design, for easy cleaning
- Small 31.75mm (1.25 in) diameter end rollers for transfer of small products



Innovative and Durable

- 304 Stainless Steel welded frame with minimal horizontal surfaces
- Designed for wipe down and low pressure wash-down with non-caustic chemicals
- Tip-up tails for access inside the conveyor for cleaning and maintenance
- Compact and enclosed tensioning system providing smooth and snag-free cleaning
- Carriage bolt on guiding for easy set up



Tip-Up Tails



High Side Guide Block with Carriage Bolt

Engineered Solutions

- Dorner's Engineered Solutions Group can tailor fit AquaGard Conveyors for specific applications and product handling requirements
- With a custom-designed conveyor system in place and the help of highly specialized engineering, your products are processed faster, your services are delivered quicker, and your profits are increased
- Solutions include: chicaning, retracting tails, depositing and rejects, merging, product flow, and more!



The Benefits of Dorner AquaGard Conveyors

Industry Ready

- Designed and manufactured to food equipment standards
- BISSC certified conveyors
- FDA approved materials and components
- · Washdown rated gearmotors and controls


A Focus on Speed

- Dorner sets the industry standard for rapid delivery
- Sanitary conveyors ship in as little as 10 business days
- Fast and effective design reduces cleaning preparation time



2



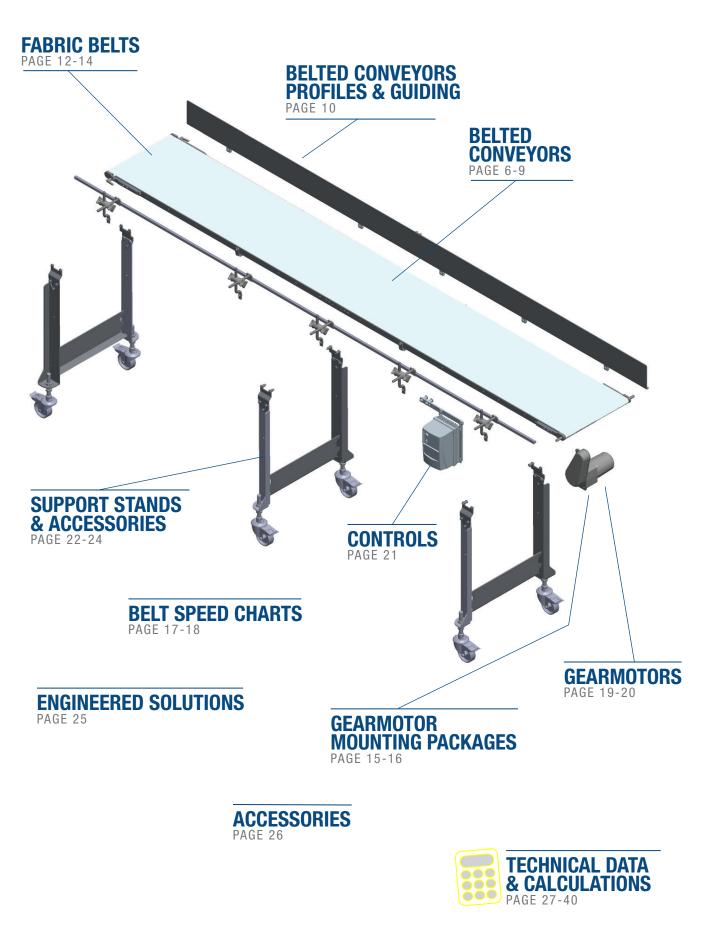







TIP-UP TAILS* FOR ACCESS INSIDE CONVEYOR FOR CLEANING AND MAINTENANCE



TOOL LESS TIP-UP OPTION ALLOWS FASTER BELT CHANGES AND CLEANING

FDA APPROVED MATERIALS IN BELTING AND PLASTIC COMPONENTS

V-GUIDED BELT COMPATIBLE

V-GUIDE BELT ENSURE PROPER BELT TRACKING AND IMPROVES CONVEYOR UP TIME

> **ROBUST OPEN LEG SUPPORT STANDS** 7 GAUGE WELDED STAINLESS STEEL



*Note: Do not run the conveyor with the tail in the tip-up position.



BELTED CONVEYOR FEATURES





BOLT-ON TO 150 MM (6 INCH) TALL









Specifications

- Loads up to 22.7 kg (50 lbs)*
- Belt speeds up to 75 m/min (246 ft/min)
- Belt widths: 70 mm (2.75 in) to 457 mm (18 in)
- Conveyor lengths: 500 mm (19.7 in) to 5485 mm (18 ft)
- One revolution of drive pulley moves the belt approximately 107 mm (4.2 in)
- Robust welded 304 Stainless Steel Frame
- Stainless steel bearing with FDA H2 food grade grease
- FDA approved belting and plastic components
- Minimal horizontal surfaces
- Suitable for use in wet environments
- Stainless Steel construction for wipe down and low pressure washdown with non-caustic solutions
- V-guide belt tracking
- Variety of guiding options



STANDARD FEATURE: V-Guided Belt Tracking





OPTIONAL: Tool-less Fully Adjustable Round

AquaGard LP Belted Flat Belt End Drive Conveyor		
72 E M W W W - LLLLL V D A I R S P P B B - Belt - - Belt - Belt - Belt - - Belt - - - Belt - - - - - - - <td< th=""><th>SS High Side Width Co</th><th>nversion</th></td<>	SS High Side Width Co	nversion
A = No Stand Mount Mounting brackets B = Standard Support Stands C = Table Top Mounting Brackets - Return Rollers: 0 = No Return Rollers 1 = INCLUDES RETURN ROLLERS	WWW (mm)	WWW (in)
- Idler Tail Type: 1 = Standard Tip-up Idler, 2 = Tool-less Tip-up Idler	70 95	2.75 3.75
- Drive Shaft Position: A, B, C or D	152	6
Drive Tail Type: 1 = Standard, 2 = Aux shaft	203	8
V-Guide Options: A = V-Guided Belt, B = Non V-Guided Belt	254	10
- Conveyor Length (mm): 00500 to 05485 in 5 mm increments (19.7 in - 18 ft)	305	12
- Conveyor Width Reference (mm): = 070 - 457 (See Width Conversion chart)	406	16
– Documentation Language: M = US English, U = Europe English, D = German, F = French, S = Spanish	457	18

* Conveyor load capacity depends on conveyor size, incline, motor position, accumulated loads and other factors. ** Note: Do not run the conveyor with the tail in the tip-up position.

> Order gearmotor mounting packages and gearmotors separately, see pages 15-21. For support stands and accessories, see page 23-25.



FLAT BELT END DRIVE



Since betts are being pulled, positions A & D are preferred. Pushing betts (B & C) reduces conveyor load capacity by approximately 66%.

05485 5485 (216)


5 mm (0.2in) increments up to...

00500 500 (19.7)

Conveyor Length Reference

Conveyor Length (L)

00005 increments up to...

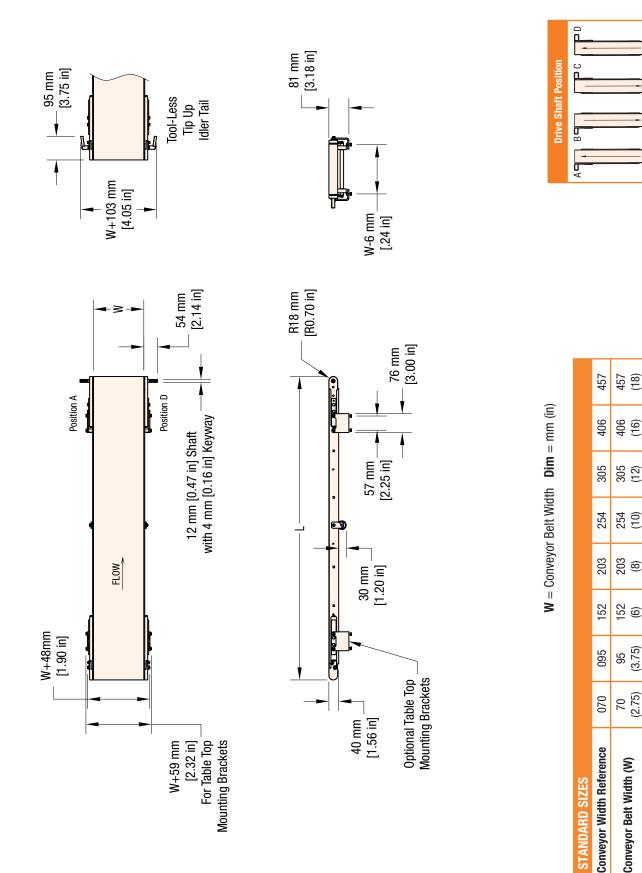

Due to the wide variety of drive set ups and applications, point of installation guarding is the responsibility of the end user.







Specifications

- Loads up to 22.7 kg (50 lbs)*
- Belt speeds up to 75 m/min (246 ft/min)
- Belt widths: 70 mm (2.75 in) to 457 mm (18 in)
- Conveyor lengths: 500 mm (19.7 in) to 5485 mm (18 ft)
- Cleat heights from 11 mm (0.43 in) to 67 mm (2.63 in)
- Robust welded 304 Stainless Steel Frame
- Stainless steel bearing with FDA H2 food grade grease
- FDA approved belting and plastic components
- Cleated belt options include sealed edge and encased
- Minimal horizontal surfaces
- Suitable for use in wet environments
- Stainless Steel construction for wipe down and low pressure washdown with non-caustic solutions
- Rugged Stainless Steel guiding



STANDARD FEATURE: V-Guided Belt Tracking








OPTIONAL: High Side Guides Up to 76 mm (3 in) Tall

AquaGard LP Cleated Belt Conveyor		
72 C M WWW - LLLLL V D A I R S P B SSSS -Spacing: SSSS in millimeters -Belt/Cleat Type: See Pages 6-9 for belt selection -Profile 0 = Low Side 2 = Cleated 25mm SS High Side 3 = Cleated 75 mm (3 in) SS High Side 6 = Cleated 1	52 mm (6 in) SS	High Side
A = No Stand Mount Mounting brackets B = Standard Support Stands C = Table Top Mounting Brackets	Width Co	nversion
- Return Rollers: 0 = No Return Rollers 1 = INCLUDES RETURN ROLLERS	WWW (mm)	WWW (in)
- Idler Tail Type: 1 = Standard Tip-up Idler, 2 = Tool-less Tip-up Idler	70	2.75
- Drive Shaft Position: A, B, C, or D	95	3.75
- Drive Tail Option: 1 = Standard, 2 = Aux shaft	152	6
- V-Guide Options: A = V-Guided Belt, B = Non V-Guided Belt	203	8
- Conveyor Length (mm): 00500 to 05485 in 5 mm increments (36 - 480 in)	254	10
- Conveyor Width Reference (mm): = 070 - 457 (See Width Conversion chart)	305	12
– Documentation Language: M = US English, U = Europe English, D = German, F = French, S = Spanish	406	16
	457	18

* Conveyor load capacity depends on conveyor size, incline, motor position, accumulated loads and other factors. ** Note: Do not run the conveyor with the tail in the tip-up position.

> Order gearmotor mounting packages and gearmotors separately, see pages 15-21. For support stands and accessories, see page 23-25.




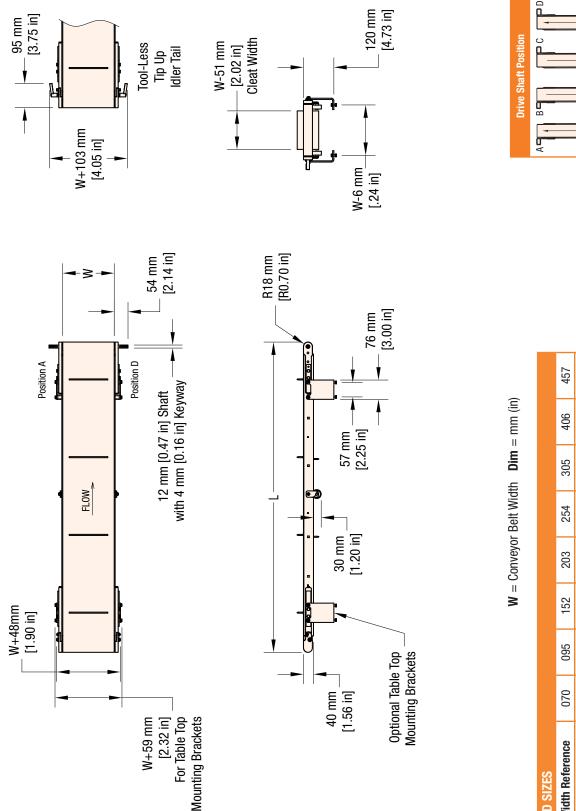

CLEATED BELT END DRIVE

Due to the wide variety of drive set ups and applications, point of installation guarding is the responsibility of the end user.



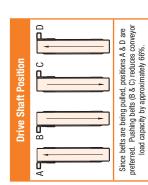

STANDARD SIZES								
Conveyor Width Reference	020	095	152	203	254	305	406	457
Contract Dalt Width AM	20	95	152	203	254	305	406	457
CUIVEYUR DEIL WILLIN (W)	(2.75)	(3.75)	(9)	(8)	(10)	(12)	(16)	(18)
Conveyor Length Reference		00500		00002 1	00005 increments up to	up to	054	05485
Conveyor Length (L)		500 (19.7)		5 mm (0.2	5 mm (0.2in) increments up to	ts up to	5485	5485 (216)


Т

Т




BELT PROFILES

FLAT BELT PROFILES

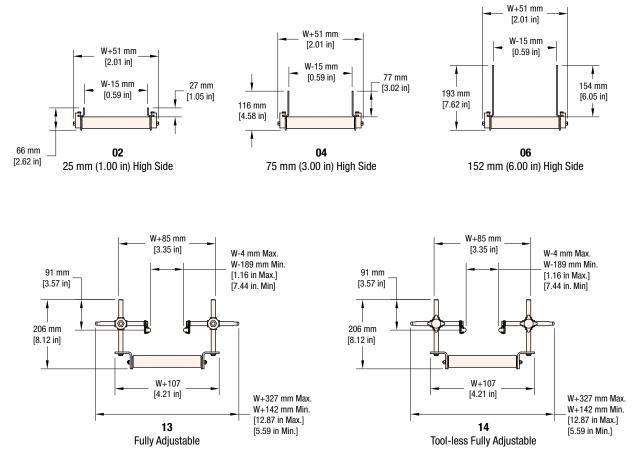

CLEATED BELT PROFILES

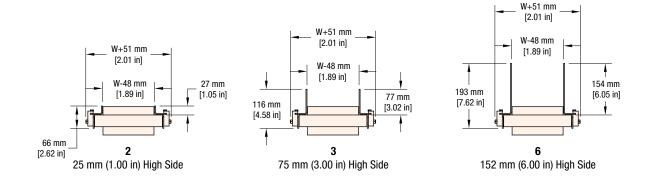

W = Conveyor Belt Width Dim = mm (in)

Due to the wide variety of drive set ups and applications, point of installation guarding is the responsibility of the end user.



STANDARD BELTING







Standard Belt Selection Guide

Standard belt material is stocked at Dorner, then cut & spliced at the factory for fast conveyor shipment.

Belt Type - Finger Splice	Belt Type - Plastic Clipper	Belt Type - Metal Clipper	Belt Specifications	V-Guidable	Belt Thickness	Surface Material	Maximum Part Temp. °C (°F)	Coefficient of Friction	FDA Approved	Anti-Static	ESD	Chemical Resistance	Special Characteristics or Applications
01	A1	1A	FDA Accumulation	х	1.7 (0.067)	Urethane	100 (212)	Low	х	х		Good	Packaging, clean room and inspection
02	A2	2A	General Purpose	х	1.8 (0.071)	Urethane	100 (212)	Med	х	х		Good	Most versatile belt offering
03	A3	3A	FDA High Friction	х	1.7 (0.067)	Urethane	100 (212)	High	х	х		Good	Packaging, clean room and inspection
05	A5	5A	Accumulation	х	1.2 (0.047)	Urethane	100 (212)	V-Low	х	х		Good	Accumulation of products
06	A6	6A	Static Dissipative	х	1.6 (0.063)	Urethane	80 (176)	V-Low		х	х	Good	Electronics handling
08	A 8	8A	High Friction	х	2.1 (0.083)	PVC	70 (158)	V-High		х		Poor	Conveys up to 35° inclines*
09			FDA High Friction	х	1.5 (0.059)	Urethane	100 (212)	High	х			Good	Lower no load torque

Dim = mm (in)

Note: See below for splice details. Plastic Clipper splice requires longer lead times. Clipper splice not available on Z-Frame Series Conveyors. Note: Belts with V-Guiding may have a slight high spot or rib on the top surface. This rib would run longitudinally along the center of the belt.

Consult factory with applications for which this may cause interference. *Incline varies due to factors like dust, fluids and part material.


Note: Wet applications are limited to specialty belt types 54, 55, 68, 69 and 70 only (see next page).

BELT SPLICING



Finger Splice


All belts are available with a standard Thermoformed finger splice. This splice makes the belt continuous and is virtually undetectable. Splice bonding methods vary by belt type. Consult factory for details.

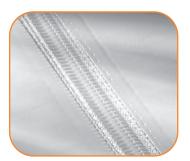

Plastic Clipper** An optional plastic clipper splice is available for quick removal of belts or when conveyors are installed in tight spaces.



Metal Clipper** An optional metal clipper splice is also available for quick removal of belts or when conveyors are installed in tight spaces.









Note: Wet applications are limited to specialty belt types 54, 55, 68 and 69 only.

S	pec	cial	ty Belt Select	ioi	ı G	iui	de								d at Dorner and needs al conveyor needs.
Belt Type - Finger Splice	Belt Type - Plastic Clipper	Belt Type - Metal Clipper	Belt Specifications	V-Guideable	8 mm (5/16 in) Nose Bar	16 mm (5/8 in) Nose Bar	Belt Thickness	Surface Material	Maximum Part Temperature	Coefficient of Friction	FDA Approved	Anti-Static	Static Conductive	Chemical Resistance	Special Characteristics or Applications
19			Nose bar High friction		х	х	0.7 (0.03)	Urethane	212°F (100°C)	High	х	х		Good	8 mm (5/16 in) Nose bar, high friction
50			Heat Resistant				1.3 (0.05)	Silicone	356°F (180°C)	Low		х		V-Good	High temperature
53			Translucent		х	х	0.02 (0.5)	Urethane	212°F (100°C)	V-Low	х			Good	Back lit inspection
54	F4	4F	FDA Sealed Edge**	х			1.6 (0.06)	Urethane	176°F (80°C)	Low	х	х		Good	Packaging, clean room and inspection
55	F5	5F	FDA Sealed Edge**	х			1.6 (0.06)	Urethane	176°F (80°C)	High	х	х		Good	Packaging, clean room and inspection
56		6F	Cut Resistant	х			2.1 (0.08)	Urethane	212°F (100°C)	Med.		х		Good	Oily product release, metal stamping
57		7F	Cut Resistant	х			2.5 (0.10)	Nitrile	176°F (80°C)	Med.		х		Poor	Felt-like, dry metal stamping, glass and ceramic
58		8F	Cut Resistant	х			1.6 (0.06)	Urethane	194°F (90°C)	Low		х		Good	Surface gold colored
59	F9	9F	Color Contrasting	х			1.6 (0.06)	PVC	158°F (70°C)	Med.		х		Poor	Black colored, hides overspray from ink jet
60	GO	OG	Color Contrasting	х		х	0.05 (1.3)	Urethane	212°F (100°C)	Low	х	х		Good	Green colored
61	G1	1G	Color Contrasting	х		х	0.05 (1.3)	Urethane	212°F (100°C)	Low	х			Good	Blue colored
63		3G	Electrically Conductive	х			0.05 (1.2)	Urethane	176°F (80°C)	Low		х	х	Good	Static conductive, electronics handling
64		4G	High Friction	х			4.4 (0.17)	PVC	176°F (80°C)	V-High		х		Poor	Dark Green colored, rough top surface, product cushioning, incline/decline apps
66		6G	Chemical Resistant	х			1.7 (0.07)	Polyester	212°F (100°C)	Med.	х	х		V-Good	Good cut resistance, metal stamping apps
67			Low Friction Cleated (Do not use with Z-Frame)	x			1.6 (0.06)	Polyester	212°F (100°C)	n/a	х			Good	Excellent product release, consult factory for part number and how to specify low friction
68	G8		FDA Encased**	х			1.5 (0.06)	Urethane	176°F (80°C)	Low	х	x		Good	Urethane enclosed for added sanitary protection
69	G9		FDA Encased**	x			2.2 (0.09)	Urethane	176°F (80°C)	Med.	х	х		Good	Urethane enclosed for added sanitary protection
71			FDA High Release	х			1.8 (0.07)	Urethane	212°F (100°C)	Low	х			Good	High release cover
72			Nose bar	х		х	1.2 (0.05)	Urethane	212°F (100°C)	Med.	х	х		Good	16 mm (5/8 in) Nose bar, medium friction
73			Nose bar Low friction		х	х	0.9 (0.03)	Urethane	212°F (100°C)	Low	х	х		Good	8 mm (5/16 in) Nose bar, low friction
75			Black Urethane	х			1.5 (0.06)	Urethane	176°F (80°C)	Low		х		Good	
76			Black Nose bar	х		х	1.2 (0.05)	Urethane	176°F (80°C)	Med.		х		Good	Black Color, 8 mm (5/16 in) nose bar
77			High Friction, green	х			2.2 (0.09)	Urethane	212°F (100°C)	High		х		Good	Green color, high friction, urethane, grooved
78			Chemical, Polyolefin, HF				1.4 (0.05)	Polyolefin	140°F (60°C)	High	х			V-Good	Chemical resistant, food grade
79			Chemical, Polyolefin, LF				1.3 (0.05)	Polyolefin	140°F (60°C)	Med.	х	х		V-Good	Chemical resistant, food grade
80			High Friction, silicone	х		х	1 (0.04)	Silicone	176°F (80°C)	High	х			Good	Silicone material, high friction
81			Low Friction, silicone	х		х	1 (0.04)	Silicone	212°F (100°C)	Med.	х			Good	Silicone material, low to medium friction

Dim = mm (in)

Note: Clipper Splices not available on Z-Frame Series Conveyors.


Note: Belts with V-Guiding may have a slight high spot or rib on the top surface. This rib would run longitudinally along the center of the belt. Consult factory with applications for which this may cause interference. ** Not available in 51 mm (2 in) widths

Note: Conveyors wider than 1,016 mm (40 in) require V-Guide belt tracking



STANDARD CLEATED BELTING




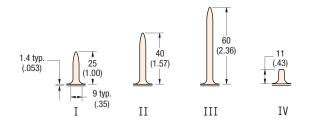

Standard Cleated Belt Selection Guide

Part No.	Base Belt	Bett Thickness, mm (in)	Belt Surface Material	Cleat Height, mm (in)	Cleat Material	Maximum Part Temp. °C (°F)	FDA Approved	Chemical Resistance	Moisture Resistance	Illustration
Α	High Friction	1.4 (0.055)	Urethane	25 (1.00)	Urethane	80 (176)	Yes	Good	Poor	I
В	High Friction	1.4 (0.055)	Urethane	40 (1.57)	Urethane	80 (176)	Yes	Good	Poor	II
C	High Friction	1.4 (0.055)	Urethane	60 (2.36)	Urethane	80 (176)	Yes	Good	Poor	III
G	High Friction	1.4 (0.055)	Urethane	11 (0.43)	Urethane	80 (176)	Yes	Good	Poor	IV
J	Low Friction	1.6 (0.06)	Urethane	25 (1.00)	Urethane	100 (212)	Yes	Good	Poor	I
К	Low Friction	1.6 (0.06)	Urethane	40 (1.57)	Urethane	100 (212)	Yes	Good	Poor	II
L	Low Friction	1.6 (0.06)	Urethane	60 (2.36)	Urethane	100 (212)	Yes	Good	Poor	Ш
М	Low Friction	1.6 (0.06)	Urethane	11 (0.43)	Urethane	100 (212)	Yes	Good	Poor	IV

CLEATED BELT SPACING



Tolerance \pm 2 (.08)

- Cleat spacing is determined by conveyor length and desired number of cleats
- Minimum spacing = 50 mm (2 in)
- Spacing accuracy = $\pm 2 \text{ mm}$ (.08 in)
- Maximum 2135 mm (84 in) conveyor length for 487 mm (18 in) and wider conveyors
- Maximum 508 mm (20 in) cleat spacing for 2135 mm (84 in) and longer conveyors











SPECIALTY CLEATED BELT PROFILES

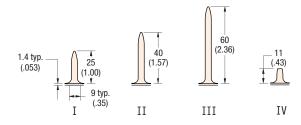

Sp	ecia	lty Cleate	ed Belt Se	election	Guide						
	Part No.	Base Belt	Belt Thickness, mm (in)	Belt Surface Material	Cleat Height, mm (in)	Cleat Material	Maximum Part Temp. °C (°F)	FDA Approved	Chemical Resistance	Moisture Resistance	Illustration
	1	Sealed Edge	1.5 (0.06)	Urethane	25 (1.0)	Urethane	80 (176)	Yes	Good	Good	I
Ited	2	Sealed Edge	1.5 (0.06)	Urethane	40 (1.57)	Urethane	80 (176)	Yes	Good	Good	I
Cleated	3	Sealed Edge	1.5 (0.06)	Urethane	60 (2.36)	Urethane	80 (176)	Yes	Good	Good	III
	4	Sealed Edge	2.0 (0.08)	Urethane	11 (0.43)	Urethane	80 (176)	Yes	Good	Good	IV

SPECIALTY CLEATED BELT SPACING



Tolerance \pm 2 (.08)

- Cleat spacing is determined by conveyor length and desired number of cleats
- Minimum spacing = 50 mm (2 in)
- Spacing accuracy = $\pm 2 \text{ mm}$ (.08 in)
- Maximum 2135 mm (84 in) conveyor length for 487 mm (18 in) and wider conveyors
- Maximum 508 mm (20 in) cleat spacing for 2135 mm (84 in) and longer conveyors





Drive Shaft Position


B


GEARMOTOR MOUNTING PACKAGE & GEARMOTOR SELECTION STEPS

Step 1: Select a Gearmotor Mounting Package (below).

- **Step 2:** Use the **Belt Speed Chart** (page 17-18) to determine your desired belt speed based on conveyor type and mount package. See Gearmotor column.
- **Step 3:** Locate the appropriate gearmotor chart (pages 20-21)


Bottom Mount Package, 90° Gearmotor



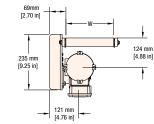


- Includes stainless steel gearmotor mounting bracket, timing belt, plated pulleys, guard and mounting hardware
- · Conveyor belt speed can be adjusted with optional ratio pulley kits

Side Mount Package, 90° Gearmotor

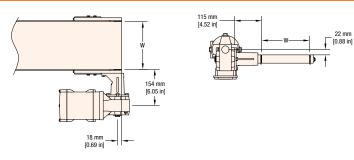



90° Gearmotor Location Options

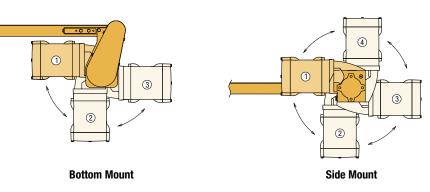


Due to the wide variety of drive set ups and applications, point of installation guarding is the responsibility of the end user. **Note:** Conveyor and gearmotor are not included in the mounting package and must be ordered separately. Dimensions = in (mm)



W = Conveyor Belt Width










Bottom Mount Package, Parallel Gearmotor

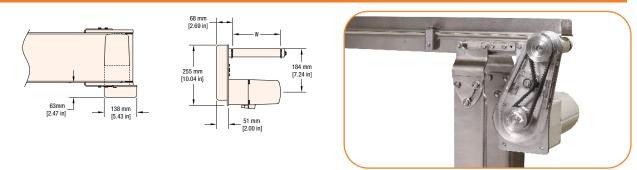

W = Conveyor Belt Width



Heavy Duty Sprocket Kit Used in Wet Applications

- Compatible with 90 Degree and Parallel Shaft mounting Packages
- Stainless Steel #40 Sprockets
- Stainless Steel/Acetal #40 Chain
- · Belt speeds up to 226 ft/min

This kit becomes part of the gearmotor mounting package when you select your belt speed from the "Chain & Sprocket Package" speed chart (see page 17-18).

Note: Conveyor and gearmotor are not included in the mounting package and must be ordered separately.

AquaGard LP	Series: Gearmotor Mount Packages
72 X B S	S S T S A G S C S
	Conveyor Sprocket: 30 = 30 Tooth, Blank = Side Drive Gearmotor Sprocket: 30 = 30 Tooth, Blank = Side Drive Gearmotor Size: S = Standard Load Gearmotor Type: S = Side B = Bottom Configuration: S = Straight onveyor Type: B = Belt notor Type: Z = 60Hz U = 50Hz (not available on parallel shaft)



(16)



Fixed Speed Belt Chart for 60Hz Motors

Fixed	Speed	l, 90 deg	ree, Tir	ning B	elt Pac	kage	
Belt S	Speed		Mount F	Package	Pulle	ey Kit	- ·
Belted C m/min	conveyor ft/min	RPM From Gearmotor	Bottom	Side	Drive Pulley	Driven Pulley	Gearmotor Chart
5	16	58	Х		28	32	1
6	20	58	Х	Х	32	32	1
7	23	58	Х		32	28	1
8	26	58	Х		44	32	1
8	26	58	Х		32	22	1
9	30	58	Х		48	32	1
9	30	58	Х		44	28	1
10	33	58	Х		48	28	1
12	39	58	Х		44	22	1
13	43	58	Х		48	22	1
15	49	172	Х		28	32	1
17	56	172	Х	Х	32	32	1
20	66	172	Х		32	28	1
24	79	172	Х		44	32	1
25	82	172	Х		32	22	1
26	85	172	Х		48	32	1
27	89	172	Х		44	28	1
29	95	172	Х		48	28	1
30	98	344	Х		28	32	1
34	112	344	Х	Х	32	32	1
34	112	172	Х		44	22	1
37	121	172	Х		48	22	1
39	128	344	Х		32	28	1
47	154	344	Х		44	32	1
50	164	344	Х		32	22	1
51	167	344	Х		48	32	1
54	177	344	Х		44	28	1
59	194	344	Х		48	28	1
69	226	344	Х		44	22	1
75	246	344	Х		48	22	1

Fixed	Speed	l, Paralle	l, Timiı	ng Beli	Packa	ige	
Belt S	Speed		Mount F	Package	Pulle	y Kit	
Belted C m/min	conveyor ft/min	RPM From Gearmotor	Bottom	Side	Drive Pulley	Driven Pulley	Gearmotor Chart
4	13	50	Х		28	32	2
5	16	50	X	Х	32	32	2
7	23	50	X	Λ	44	32	2
7	23	50	X		32	22	2
7	23	50	Х		48	32	2
8	26	50	Х		32	19	2
10	33	50	Х		44	22	2
11	36	50	Х		48	22	2
12	39	50	Х		44	19	2
13	43	50	Х		48	19	2
15	49	167	Х		28	32	2
17	56	167	Х	Х	32	32	2
23	75	167	Х		44	32	2
24	79	167	Х		32	22	2
25	82	167	Х		48	32	2
28	92	167	Х		32	19	2
33	108	167	Х		44	22	2
36	118	167	Х		48	22	2
39	128	167	Х		44	19	2
42	138	167	Х		48	19	2

Fixed	Speed	l, 90 deg	ree, Ch	ain &	Sprock	et Pac	kage
Belt S	Speed		Mount F	Package	Pulle	ey Kit	. .
Belted C	conveyor	RPM From Gearmotor	Bottom	Side	Drive	Driven	Gearmotor Chart
m/min	ft/min	dourmotor	DOLLOIN	Side	Pulley	Pulley	onart
7	23	58	Х		12	10	1
9	30	58	Х		16	10	1
10	33	58	Х		18	10	1
12	39	58	Х		20	10	1
21	69	172	Х		12	10	1
27	89	172	Х		16	10	1
31	102	172	Х		18	10	1
34	112	172	Х		20	10	1
41	135	344	Х		12	10	1
55	180	344	Х		16	10	1
62	203	344	Х		18	10	1
69	226	344	Х		20	10	1

Fixed	Speed	l, Paralle	l, Chai	n & Sp	rocket	Packa	ge
Belt S	Speed		Mount F	Package	Pulle	ey Kit	
Belted C	onveyor	RPM From Gearmotor	Bottom	Side	Drive	Driven	Gearmotor Chart
m/min	ft/min		Dottom	Side	Pulley	Pulley	ontait
6	20	50	Х		12	10	2
8	26	50	Х		16	10	2
9	30	50	Х		18	10	2
10	33	50	Х		20	10	2
20	66	167	Х		12	10	2
27	89	167	Х		16	10	2
30	98	167	Х		18	10	2
33	108	167	Х		20	10	2

Due to the wide variety of drive set ups and applications, point of installation guarding is the responsibility of the end user.





Fixed Speed Belt Chart for 50Hz Motors

Fixed	Speed	l, 90 deg	ree, Tiı	ning B	elt Pac	kage	
Belt S	Speed		Mount F	Package	Pulle	y Kit	
Belted C m/min	onveyor ft/min	RPM From Gearmotor	Bottom	Side	Drive Pulley	Driven Pulley	Gearmotor Chart
13	4	47	Х		28	32	5
16	5	47	X	Х	32	32	5
16	5	47	X	^	32	28	5
20	6	47	X		44	32	5
23	7	47	X		32	22	5
23	7	47	X		48	32	5
23	7	47	X		40	28	5
26	8	47	X		44	28	5
30	9	47	X		40	20	5
33	10	47	X		44	22	5
39	12	142	X		28	32	5
46	14	142	X	Х	32	32	5
40 52	14	142	X	^	32	28	5
62	19	142	X		32 44	32	5
69	21	142	X		32	22	5
69	21	142	X		32 48	32	5
72	21	142	X		40	32 28	5
72	22	142	X		44	28	5
79	24	280	X		40 28	20 32	5 5
79 92	24	280	X	Х	28 32	32	5 5
				~	32 44	-	5 5
92 102	28 31	142 142	X X		44	22 22	5 5
-					48 32		
105	32	280	X		-	28	5
125	38 41	280	X		44 32	32 22	5 5
135		280	X		-		-
138	42	280	X		48	32	5
144	44	280	Х		44	28	5
157	48	280	Х		48	28	5
184	56	280	Х		44	22	5
200	61	280	Х		48	22	5

Fixed Speed, 90 degree, Chain & Sprocket Package											
Belt S	Speed		Mount F	Package	Pulle	ey Kit	. .				
Belted C	onveyor	RPM From Gearmotor	Bottom	Side	Drive	Driven	Gearmotor Chart				
m/min	ft/min	douiniotor	DOLLOIN	Side	Pulley	Pulley	onart				
20	6	47	Х		12	10	5				
23	7	47	Х		16	10	5				
26	8	47	Х		18	10	5				
30	9	47	Х		20	10	5				
56	17	142	Х		12	10	5				
75	23	142	Х		16	10	5				
82	25	142	Х		18	10	5				
92	28	142	Х		20	10	5				
108	33	280	Х		12	10	5				
148	45	280	Х		16	10	5				
164	50	280	Х		18	10	5				
184	56	280	Х		20	10	5				

Variable Speed Belt Chart for 50Hz Motors

Varial	ole Spee	d, 90 deg	ree, Ti	ming	Belt P	ackag	e
Belt	Speed		Mount Pa	ackage	Pulle	y Kit	
Belted	Conveyor	RPM From Gearmotor	Bottom	Side	Drive	Driven	Gearmotor Chart
m/min	ft/min			oluc	Pulley	Pulley	
3 to 13	0.8 to 4	47	Х		28	32	6
7 to 16	2 to 5	47	Х	Х	32	32	6
7 to 20	2 to 6	47	Х		44	32	6
7 to 23	2 to 7	47	Х		32	22	6
7 to 23	2 to 7	47	Х		48	32	6
7 to 30	2 to 9	47	Х		44	22	6
7 to 33	2 to 10	47	Х		48	22	6
13 to 79	4 to 24	280	Х		28	32	6
20 to 92	6 to 28	280	Х	Х	32	32	6
26 to 125	8 to 38	280	Х		44	32	6
26 to 135	8 to 41	280	Х		32	22	6
26 to 138	8 to 42	280	Х		48	32	6
39 to 184	12 to 56	280	Х		44	22	6
39 to 200	12 to 61	280	Х		48	22	6

Varial	Variable Speed, 90 degree, Chain & Sprocket Package										
Belt	Speed		Mount Pa	ackage	Pulle	ey Kit	Coormotor				
Belted	Conveyor	RPM From Gearmotor	Bottom	Side	Drive	Driven	Gearmotor Chart				
m/min	ft/min	dourmotor	Bottom		Pulley	Pulley	onart				
7 to 20	2 to 6	47	Х		12	10	6				
7 to 23	2 to 7	47	Х		16	10	6				
7 to 26	2 to 8	47	Х		18	10	6				
7 to 30	2 to 9	47	Х		20	10	6				
20 to 108	6 to 33	280	Х		12	10	6				
33 to 148	10 to 45	280	Х		16	10	6				
33 to 164	10 to 50	280	Х		18	10	6				
39 to 184	12 to 56	280	Х		20	10	6				

Due to the wide variety of drive set ups and applications, point of installation guarding is the responsibility of the end user.





Variable Speed Belt Chart for 60Hz Motors

Varia	ble Spee	d, 90 deg	jree, Ti	ming	Belt P	ackag	e
Belt	Speed		Mount Pa	ackage	Pulle	ey Kit	_
Belted	Conveyor	RPM From Gearmotor Bottom		Side	Drive	Driven	Gearmotor Chart
m/min	ft/min		Dottom	JILE	Pulley	Pulley	
1 to 5	2 to 16	58	Х		28	32	3
1 to 6	2 to 20	58	Х	Х	32	32	3
1 to 8	3 to 26	58	Х		44	32	3
1 to 8	3 to 26	58	Х		32	22	3
1 to 9	3 to 30	58	Х		48	32	3
1 to 12	4 to 39	58	Х		44	22	3
1 to 13	4 to 43	58	Х		48	22	3
3 to 30	10 to 98	344	Х		28	32	3
3 to 34	11 to 112	344	Х	Х	32	32	3
5 to 47	15 to 154	344	Х		44	32	3
5 to 50	16 to 164	344	Х		32	22	3
5 to 51	17 to 167	344	Х		48	32	3
7 to 69	23 to 226	344	Х		44	22	3
8 to 75	25 to 246	344	Х		48	22	3

Varia	ble Spee	d, Paralle	el, Timi	ing B	elt Pac	kage	
Belt	Speed		Mount Pa	ackage	Pulle	ey Kit	
	Conveyor	RPM From Gearmotor	Bottom	Side	Drive	Driven	Gearmotor Chart
m/min	ft/min				Pulley	Pulley	
0 to 4	1 to 13	50	Х		28	32	4
1 to 5	2 to 16	50	Х	Х	32	32	4
1 to 7	2 to 23	50	Х		44	32	4
1 to 7	2 to 23	50	Х		32	22	4
1 to 7	2 to 23	50	Х		48	32	4
1 to 10	3 to 33	50	Х		44	22	4
1 to 11	4 to 36	50	Х		48	22	4
2 to 15	5 to 49	167	Х		28	32	4
2 to 17	6 to 56	167	Х	Х	32	32	4
2 to 23	8 to 75	167	Х		44	32	4
2 to 24	8 to 79	167	Х		32	22	4
3 to 25	8 to 82	167	Х		48	32	4
3 to 33	11 to 108	167	Х		44	22	4
4 to 36	12 to 118	167	Х		48	22	4

Varia	Variable Speed, 90 degree, Chain & Sprocket Package										
Belt	Speed		Mount Pa	Mount Package		y Kit					
Belted	Conveyor	RPM From Gearmotor	Bottom	Side	Drive	Driven	Gearmotor Chart				
m/min	ft/min	dourmotor	Bollom		Pulley	Pulley	onart				
1 to 7	2 to 23	58	Х		12	10	3				
1 to 9	3 to 30	58	Х		16	10	3				
1 to 10	3 to 33	58	Х		18	10	3				
1 to 12	4 to 39	58	Х		20	10	3				
4 to 41	14 to 135	344	Х		12	10	3				
6 to 55	18 to 180	344	Х		16	10	3				
6 to 62	20 to 203	344	Х		18	10	3				
7 to 69	23 to 226	344	Х		20	10	3				

Variable Speed, Parallel, Chain & Sprocket Package


Belt	Speed		Mount Pa	Mount Package		y Kit	0	
Belted Conveyor		RPM From Gearmotor	Bottom	Side	Drive	Driven	Gearmotor Chart	
m/min	ft/min	douiniotor	DOLLOIN	Side	Pulley	Pulley		
1 to 6	2 to 20	50	Х		12	10	4	
1 to 8	3 to 26	50	Х		16	10	4	
1 to 9	3 to 30	50	Х		18	10	4	
1 to 10	3 to 33	50	Х		20	10	4	
2 to 20	7 to 66	167	Х		12	10	4	
3 to 27	9 to 89	167	Х		16	10	4	
3 to 30	10 to 98	167	Х		18	10	4	
3 to 33	11 to 108	167	Х		20	10	4	







💾 STANDARD LOAD. FIXED SPEED




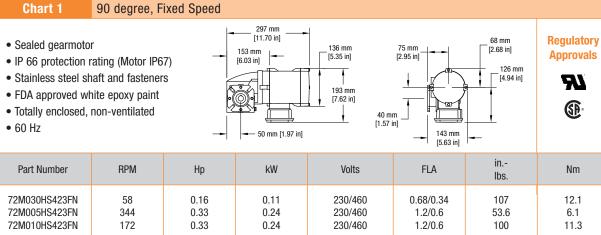


Chart 5 90 degree, Fixed Speed, 50Hz

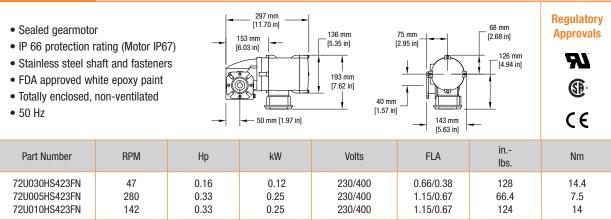

Parallel Shaft, Fixed Speed

Chart 2

 IP 65 protection r 115V, 1 phase ind 230V, 3 phase wi Stainless steel sh FDA approved wh 	 Sealed gearmotor IP 65 protection rating (Motor IP67) 115V, 1 phase includes starter, cords and plug 230V, 3 phase wiring to starter by others Stainless steel shaft and fasteners FDA approved white epoxy paint Totally enclosed, non-ventilated 60 Hz 			105 mm [4.13 in] 52 mm [2.07 in] 18mm Ø 86 mm [3.39 in] [7.00 in]	264 mm [10.40 in] - 42 mm [1.65 in]	Regulatory Approvals	
Part Number	RPM	Нр	kW	Volts	FLA	in Ibs.	Nm
62M009PY411FN 62M009PY423FN 62M030PY411FN 62M030PY423FN	167 167 50 50	0.12 0.12 0.12 0.12	0.09 0.09 0.09 0.09	115 230 115 230	1.51 0.49 1.51 0.49	26 26 77 77	2.9 2.9 8.7 8.7

Note: 115V 1 phase gearmotor must be plugged into a GFI circuit

CE Note: When buying a gearmotor only without the starter, the customer must supply their own on/off switch and motor overload protection to comply with the CE Safety Directive.


FLA = Full Load Amperes Some motors and gear reducers may normally operate hot to the touch. Consult factory for specific operating temperatures. Note: Dimensions = mm (in)





💾 STANDARD LOAD, VARIABLE SPEED

Chart 3 90 degree, Variable Speed

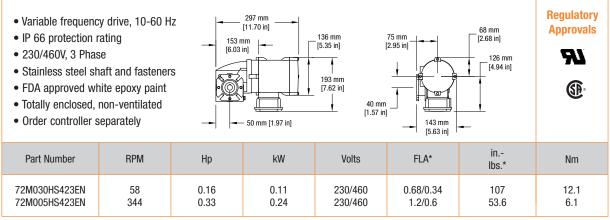

* At 60 Hz

Chart 6 90 degree, Variable Speed, 50Hz


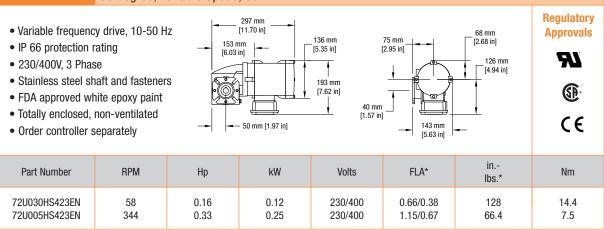


Chart 4 Parallel Shaft, Variable Speed



* At 60 Hz

C € Note: When buying a gearmotor only without the starter, the customer must supply their own on/off switch and motor overload protection to comply with the CE Safety Directive.

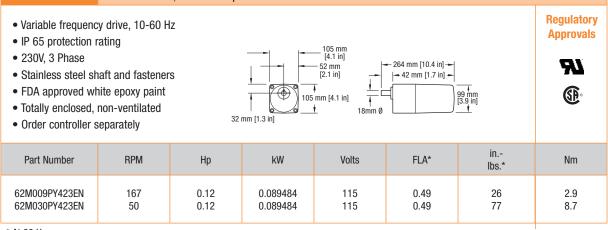

FLA = Full Load Amperes Some motors and gear reducers may normally operate hot to the touch. Consult factory for specific operating temperatures. **Note:** Dimensions = mm (in)



Variable Speed Controllers


Chart A

Variable Speed Controllers

26 mm [1.00 in]

227 mm [8.96 in]

- Variable Frequency Drive
- IP 65 Plastic Enclosure
- Stainless Steel mounting hardware
- Digital Display
- Keypad with Start/Stop and Speed variation
- Includes cord to motor
- Power to controller by others
- UL Approved

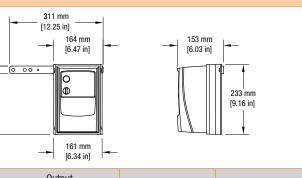

Part Number	Input			Out	put	Max Hp	Max Amps	
Fait Number	Volts	Phase	Hz	Volts	Phase	ινιαχ πμ	wax Amps	
76MVA1122S	115	1	60	230	3	0.5	2.3	
76MVA2122S	230	1	60	230	3	0.5	2.3	
76MVA2322S	230	3	60	230	3	0.5	2.3	
76MVA4342S	460	3	60	460	3	0.5	1.2	

MANUAL MOTOR STARTER

Chart B	Chart B 🔚 Manual Motor Starter									
 Nema 4X Plastic Enclosure Stainless Steel mounting hardware IP 66 Start / Stop Switch Lock-out tag-out capable Includes wiring to Motor Power to Starter by others No plug/cord set included 										
Part Number		Input		FLA						
r ar tridinbor	Volts	Phase	Hz	. 57						
74MM23A 74MM23B 74MM43A	208-230 208-230 460	3 3 3	60 60 60	0.63 - 0.99 1 - 1.59 0.66 - 0.99						

FLA = Full Load Amperes

Chart C 🔚 Manual Motor Starter									
 Start / Stop Switch Includes wiring to Motor Plug to Starter by others 									
Part Number		Input		F LA					
Fait Nulliper	FLA								
KT103724	230v/400v 3 50 1.2								

FLA = Full Load Amperes



Fixed Height Stands

- Welded open frame Stainless Steel construction with a 2B finish
- \bullet Adjustable angle connecting plate from Ø to 60 degrees
- For 70 mm (2.75 in) to 457 mm (18 in) Widths:
- ±100 mm (4 in) of adjustment
- Optional swivel locking caster
- Optional diagonal brace for added stability
- For available heights see page 23





STANDARD FEATURE: Fixed Foot



OPTIONAL: Swivel Caster



OPTIONAL: Diagonal Brace

Outriggers

- Fixed height support stands are available with outriggers
- Outriggers provide added support for tall applications
- Welded Stainless Steel construction with 2B finish
- Extend stand width 305 mm (12 in)



Dimensions = mm (in) Note: Due to the wide variety of conveyor and stand options along with possible configurations, stability of the final setup is the responsibility of the end user.






SUPPORT STANDS

Low Height Supports Stands

- All components are Stainless Steel brushed to #4 finish
- ±51 mm (2 in) of adjustment
- \bullet Fixed Foot self-aligns 10° for sloped floors
- Caster is swivel locking
- Horizontal conveyor mounts only
- For available heights see below

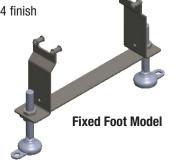



Support Stand Heights


		Fixed	l Foot		Caster Foot			
Туре	Shortes	Shortest Stand Tallest Stand		Shortes	t Stand	Tallest Stand		
	Minimum Top Of Belt	Maximum Top Of Belt	Minimum Top Of Belt	Maximum Top Of Belt	Minimum Top Of Belt	Maximum Top Of Belt	Minimum Top Of Belt	Maximum Top Of Belt
Angle Mount	400 (15.75)	500 (19.69)	1900 (74.8)	2000 (78.7)	525 (20.67)	625 (24.60)	1900 (74.8)	2000 (78.7)
Angle Mount w/ Outrigger	400 (15.75)	500 (19.69)	1900 (74.8)	2000 (78.7)	525 (20.67)	625 (24.60)	1900 (74.8)	2000 (78.7)
Low Height	250 (9.84)	350 (13.78)	325 (12.8)	425 (16.73)	375 (14.76)	475 (18.70)	450 (17.7)	550 (21.7)

Note: Dimensions = mm (in)

Height increments of 25 mm (1 in)

Fixed Height Support Stands Widths*								
Conveyor Width	070	095	152	203	254	305	406	457
Conveyor Belt	70	95	152	203	254	305	406	457
Width (W)	(2.75)	(3.75)	(6)	(8)	(10)	(12)	(16)	(18)
Angle Mount	348	373	430	430	481	532	633	684
Width	(14)	(15)	(17)	(17)	(19)	(21)	(25)	(27)
Angle Mount w/ out-	662	687	744	744	795	846	947	998
riggers Width	(26)	(27)	(29)	(29)	(31)	(33)	(37)	(39)
Low Height Stand	310	335	392	392	443	494	595	646
Width	(12)	(13)	(15)	(17)	(19)	(21)	(25)	(27)

*Dimensions shown are nominal. Contact factory for specific layout and dimensions.

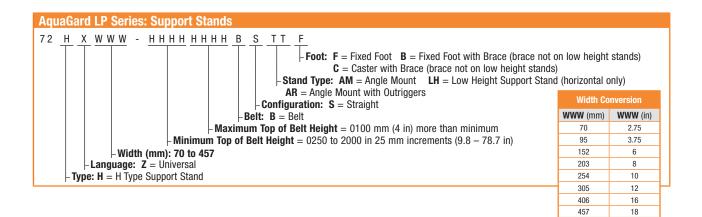

Dimensions = mm (in)

Note: Due to the wide variety of conveyor and stand options along with possible configurations, stability of the final setup is the responsibility of the end user.





Table Top Mounting Brackets




Specifications

- 7 gauge stainless steel, #4 finish
- Comes with mounting hardware
- Compatible with industrial aluminum stands
- Dimensional information see pages 7 and 9

Part Number	531135	Cleated Belts
Part Number	531150	Flat Belts

Sanitary Floor Anchor Kits - Type 1

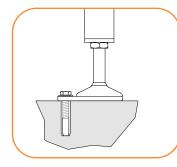


Specifications

- 10 mm (.375 in) x 40 mm (1.57 in) drop in
- Stainless Steel
- Anchor is flush with floor upon removal of bolt
- Two (2) per anchor kit

Part Number	FAS-1
-------------	-------

Sanitary Floor Anchor Kits - Type 2

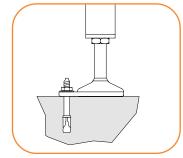

Specifications

- 10 mm (.375 in) x 70 mm (2.75 in)
- Stainless Steel
- Threaded anchor bolt protrudes above floor after installation
- Two (2) per anchor kit



Dimensions = mm (in) Note: Due to the wide variety of conveyor and stand options along with possible configurations, stability of the final setup is the responsibility of the end user.






Light Load Side Drive Solution



Specifications

- Compact side drive design
- Suitable for short length and/or light load applications
- 230/460V 3 Phase VFD rated gearmotor
- Contact factory for options

Bottom Wiper Option

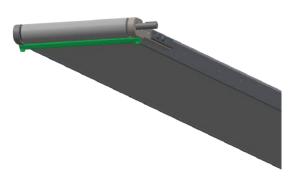

Specifications

- Wiper can be mounted on either the drive or idler tail.
- Cleans flat belt from stick on product

Drip Pans



Specifications

- Widths: 152 mm (6 in) to 1524 mm (60 in) available in 50 mm (2 in) increments
- Lengths: 610 mm (24 in) to 25375 mm (999 in) available in 25 mm (1 in) increments maximum section lengths of 2997 mm (118 in)
- Tool-less hook design for fast removal and rapid cleaning
- Provides a 50 mm (2 in) window for clean-out access without removal
- All pans equipped with a 25 mm (1 in) containment lip on all sides
- Contact factory for additional options and ordering

Dimensions = mm (in)

Note: Due to the wide variety of conveyor and stand options along with possible configurations, stability of the final setup is the responsibility of the end user.







Stainless Steel Carriage Bolts




Specifications

- Stainless Steel Carriage bolts
- Kits come in packs of 10
- Support stand brackets uses M8x20mm with flanged hex nuts
- Stand brace uses M6x30mm with spacer, and nuts
- Stainless Steel guide block uses M6x30mm hardware

Part Number	Size	Description
531373	M8x20mm	Support Stand
531374	M6x30mm	Stand Brace
531101	M6x30mm	Block Assembly

Side Drive Coupling

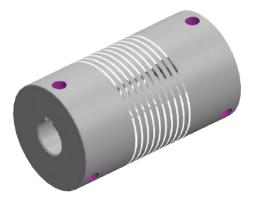

Specifications

- · Flexible coupling for gearmotor and conveyor
- · Comes with set screws and replacement keys
- 38mm diameter X 67mm long
- 12mm bore with 4mm keyway

Part Number 807-995

Dimensions = mm (in) Note: Due to the wide variety of conveyor and stand options along with possible configurations, stability of the final setup is the responsibility of the end user.





Regulatory Approvals:

Conveyors:

All AquaGard LP Series standard conveyors (not including gearmotors and controllers) are CE approved. CE approval follows the provisions of the following directives; Machine Directive 2006/42/EC, EU Low Voltage Directive 2006/95/EC, and EMC Directive 2004/108/EC. All conveyors are marked with the CE symbol on the Dorner serial number tag located on the conveyor frame. Contact the factory for the CE Declaration of Conformity.

All AquaGard LP Series standard conveyors (not including gearmotors and controllers) are designed and manufactured in accordance with the restrictions defined in the "Restriction of Hazardous Substances" directive, citation 2002/95/EC, commonly known as RoHS. All conveyors are marked with the RoHS symbols on the Dorner serial number tag located on the conveyor frame.

Gearmotors and Controllers:

All AquaGard LP Series gearmotors and controllers carry one or more of the following approvals. Products are not covered by each approval. Please see the appropriate part number on the Gearmotor and controller charts located in this manual. In addition, regulatory symbols are located on the product information tags located on the product.

CE	CE Marking on a product is a manufacturer's declaration that the product complies with the essential requirements of the relevant European health, safety and environmental protection legislation, in practice by the Product Directives. CE Marking on a product ensures the free movement of the product within the European Union (EU).
RoHS	This directive restricts (with exceptions) the use of six hazardous materials in the manu- facture of various types of electronic and electrical equipment. It is closely linked with the Waste Electrical and Electronic Equipment Directive (WEEE) 2002/96/EC which sets collec- tion, recycling and recovery targets for electrical goods and is part of a legislative initiative to solve the problem of huge amounts of toxic e-waste.
9U *	The UL Recognized Component mark is for products intended to be installed in another device, system or end product. This Recognized Component Mark is for the United States only. When a complete product or system containing UL Recognized Components is evaluated, the end-product evaluation process can be streamlined.
c SL [®] us	The UL Recognized Component mark is for products intended to be installed in another device, system or end product. This Recognized Component Mark is for the United States and Canada. When a complete product or system containing UL Recognized Components is evaluated, the end-product evaluation process can be streamlined.
S ₽®®	CSA International (Canadian Standards Association), is a provider of product testing and cer- tification services for electrical, mechanical, plumbing, gas and a variety of other products. Recognized in the U.S., Canada and around the world, CSA certification marks indicate that a product, process or service has been tested to a Canadian or U.S. standard and it meets the requirements of an applicable CSA standard or another recognized document used as a basis for certification.
cULus	The UL Listing Mark means UL found that representative product samples met UL's safety requirements. These requirements are primarily based on UL's own published standards for safety. The C-UL-US Mark indicates compliance with both Canadian and U.S. requirements. The products with this type of Mark have been evaluated to Canadian safety requirements and U.S. safety requirements.





Baking Industry Standards and Certifications:

AquaGard LP Series Conveyors are often used in food production or food packaging areas where proper design of equipment is essential to maintain proper food safety. AquaGard LP Series conveyors are designed for light wash down environments typically seen in packaged food, dry food production or confectionary production. In these applications the correct installation and application of the conveyor is critical to the proper running of the conveyor and maintaining proper food safety. The end user must ensure that the conveyor belts are properly tracked and the conveyor is properly installed as defined by Dorner.

All AquaGard LP Series products are designed and constructed to be used in dry food or packaged food production environments. The following AquaGard products have gone through testing and certification and are certified to BISSC standard, design requirements for Conveyors section of ANSI/ASB/Z50.2-2015.

AquaGard LP Series Belted Conveyor

Contact the factory for copy of the certification.







Materials and Chemical Resistance:

Conveyor Frames and Plastics					
The following is a list of base materials used in the AquaGard LP Series conveyor:					
Material Conveyor Component					
Acetal Copolymer, POM Molded bearing housings					
Polyamide, PA	Adjustable Guide Support Brackets				
UHMW-PE	Adjustable Guide Face				
Aluminum, anodized (Note: cut ends of aluminum is not anodized)	Conveyor Frame, Support Legs, High Side Guiding, Adjustable Guide Horizontal Post, Adjustable Guide Rail				

The materials used in the AquaGard LP Series product can resist many chemicals, however some should be avoided. Avoid the following:

- Acids with PH less than 4
- Bases with PH higher than 9

Resistance to Materials: Conveyor Frames and Plastics

The following table provides the resistance to materials used in the conveyor to several chemicals. Application testing is recommended to determine long term material durability.

Legend:

1 = Very good resistance | 2 = Good resistance | 3 = Moderate resistance | 4 = Not recommended | X = no data available

Acids	Acetal POM	Polypropylene	Polyamide PA	UHMW-PE	Aluminum
Acetic acid	3	1	4	1	2
Benzoic acid	3	1	4	1	4
Boric acid	3	1	2	1	2
Citric acid	3	1	2	1	2
Chromic acid	4	1	4	1	3
Hydrofluoric acid	4	1	4	1	4
Hydrochloric acid	4	1	4	1	3
Hydro cyanic acid	4	Х	4	1	1
Nitric acid	4	1	4	1	3
Oleic acid	3	1	2	1	1
Oxalic acid	4	1	2	1	1
Phosphoric acid	4	1	4	1	3
Sulphuric acid	4	2	4	1	3
Tartaric acid	3	1	2	1	1
Basic Compounds	Acetal POM	Polypropylene	Polyamide PA	UHMW-PE	Aluminum
Ammonia	1	1	2	1	2
Calcium hydroxide	1	Х	2	1	4
Caustic soda	1	Х	2	1	3
Potassium hydroxide	1	1	2	1	4



TECHNICAL DATA AND CALCULATIONS



Resistance to Materials: Conveyor Frames and Plastics *(continued)*

Legend: 1 = Very good resistance 2 = Good resistance 3 = Moderate resistance 4 = Not recommended X = no data available								
Salts	Acetal POM	Polypropylene	Polyamide PA	UHMW-PE	Aluminum			
Potassium bicarbonate	2	Х	2	1	1			
Potassium permanganate	2	2	4	1	1			
Sodium cyanic	2	Х	2	1	4			
Sodium hydrochloride	3	Х	4	1	4			
Acid salt	2	Х	3	1	Х			
Basic salt	1	Х	2	1	Х			
Neutral salt	1	Х	2	1	Х			
Organic Compounds	Acetal POM	Polypropylene	Polyamide PA	UHMW-PE	Aluminum			
Acetone	1	1	1	1	1			
Aniline	2	1	3	1	1			
Benzene	1	3	2	4	1			
Benzine	2	Х	2	3	1			
Butyl alcohol	2	Х	2	1	1			
Carbon disulphide	1	3	2	3	1			
Carbon tetrachloride	1	3	1	3	2			
Chloroform	1	4	3	4	Х			
Ethyl acetate	1	1	2	1	1			
Ethyl alcohol	1	Х	2	1	1			
Heptane	2	1	1	2	Х			
Methyl alcohol	1	Х	2	1	2			
Methyl ethyl ketone	1	2	1	2	2			
Nitrobenzene	2	2	2	1	1			
Phenol	3	1	4	1	1			
Gases	Acetal POM	Polypropylene	Polyamide PA	UHMW-PE	Aluminum			
Carbon dioxide	3	1	1	1	1			
Carbon monoxide	2	Х	1	1	1			
Chlorine	2	4	4	3	1			
Hydrogen Sulfide	3	1	1	1	1			
Sulphur dioxide	2	1	3	1	1			
Other	Acetal POM	Polypropylene	Polyamide PA	UHMW-PE	Aluminum			
Carbon tetrachloride	1	3	1	3	2			
Beer	1	1	2	1	1			
Fruit juice	1	2	2	1	2			
Gasoline	1	1	2	1	1			
Milk	1	1	1	1	1			
Oil	1	3	1	1	1			
Vinegar	1	1	2	1	1			

DORNER



Belting:

The following is a list of the top coat materials used in AquaGard LP Series conveyor belting:

Material	Belt Number				
Urethane	01, 02, 03, 05, 06, 09, 54, 55, 56, 53, 60, 61, 63, 68, 69, 72, 73, 75, 76, 77				
PVC (non FDA approved)	08, 18, 59, 64				
Silicone	50, 80, 81				
Polyester	66				
Nitrile	57				
Urethane (hard)	58				

Resistance to Materials: Belting

The following table provides the resistance to belt materials used in the conveyor to several chemicals. Application testing is recommended to determine long term material durability.

Legend: $1 = \text{Good resistance} \mid 3 = \text{Limited resistance} \mid 4 = \text{Not recommended}$

Materials	Urethane	PVC (non FDA)	Silicone	Polyester	Urethane (hard)
Chemicals					
Acetic acid (glacial acetic acid)	4	3	1	1	4
Acetic acid 10 %	3	1	1	3	1
Acetic anhydride	3	4	1	1	4
Acetone	4	4	1	3	4
Aluminium salts	1	1	1	1	1
Alum	1	1	1	1	1
Ammonia, aqueous	3	1	1	3	1
Ammonia, gaseous	1	1	3	1	1
Ammonium acetate	1	1	1	1	1
Ammonium carbonate	1	1	1	1	1
Ammonium chloride	1	1	1	1	1
Ammonium nitrate	1	1	1	1	1
Ammonium phosphate	1	1	1	1	1
Ammonium sulphate	1	1	1	1	1
Amyl alcohol	1	4	3	1	1
Aniline	3	3	3	4	4
Barium salts	1	1	1	1	1
Benzaldehyde	4	4	4	4	4
Benzine (see also Motor fuels)	1	3	3	1	1
Benzoic acid	1	1	1	1	1
Benzol	3	4	4	3	3
Boric acid	1	1	1	1	1
Boric acid, solution	1	1	1	1	1
Bromine	4	4	4	4	4
Bromine water	4	3	1	4	3
Butane, gaseous	1	1	1	1	1
Butane, liquid	1	1	1	1	1
Butyl acetate	4	4	4	3	4
n-Butyl alcohol	1	3	1	1	1
Calcium chloride	1	1	1	1	1



TECHNICAL DATA AND CALCULATIONS



1 = Good resistance 1 & a tore Materials Urethane PVC (nor, PL) Silicone Polyester Methane Cacioum nitrate 1 1 1 1 1 1 Cacioum sulphate 1 1 1 1 1 1 Cacioum sulphate 4 4 4 4 4 4 Cacioum sulphate 4 4 4 4 4 4 Cacioum sulphate 4 4 4 4 4 4 4 Chiorine, gaseous, dy 4	Resistance to Materials: Belting (continued)								
MaterialsUrethane (non FDA)SiliconePolyester(nard)Calcium nitrate11111Calcium sulphate11111Cabon disulphité44344Cabon disulphité34443Chlorine, liquid44444Chlorine, gaseous, dy44444Chlorine, gaseous, dy44444Chlorine, gaseous, dy44444Chlorine, gaseous, dy44444Chlorobenzene44444Chlorobenzene44444Chlorobenzene44444Chlorobenzene44444Chloroberzene44444Chloroberzene44444Chloroberzene44444Chloroberzene11111Chromium salts111111Chromium salts11114Choroper salts11144Choroper salts11144Choroper salts11444Cyclohexane44444	•								
Calcium sulphate 1 1 1 1 Carbon disulphide 4 4 3 4 4 Carbon disulphide 3 4 4 4 3 Chlorine, liquid 4 4 4 4 4 4 Chlorine, gaseous, dry 4 4 4 4 4 4 Chlorine, gaseous, dry 4 4 4 4 4 4 Chlorine, gaseous, dry 4 4 4 4 4 4 Chloroberzene 4 4 4 4 4 4 Chlorosulphonic acid 4 4 4 4 4 Chromium salts 1 1 1 1 1 1 Chromium salts 1 1 1 1 1 1 1 Chromium salts 1 1 1 1 1 1 1 1 1 1 1 1 <th>Materials</th> <th>Urethane</th> <th></th> <th>Silicone</th> <th>Polyester</th> <th></th>	Materials	Urethane		Silicone	Polyester				
Carbon disulphide 4 4 3 4 4 Carbon tetrachloride 3 4 4 4 3 Chlorine, iquid 4 4 4 4 4 Chlorine, gaseous, dny 4 4 4 4 4 Chlorine, gaseous, dny 4 4 4 4 4 Chlorine, gaseous, dny 4 4 4 4 4 Chlorine water 4 4 4 4 4 Chlorobenzene 4 4 4 4 4 Chlorobenzene 4 4 4 4 4 Chlorobenzene 4 4 4 4 4 Chromium salts 1 1 1 1 1 1 Chromium salts 1 1 1 1 1 1 1 Chromium salts 1 1 1 1 1 1 1 1 <td< td=""><td>Calcium nitrate</td><td>1</td><td>1</td><td>1</td><td>1</td><td>1</td></td<>	Calcium nitrate	1	1	1	1	1			
Carbon tetrachloride 3 4 4 4 4 Chlorine, liquid 4 4 4 4 4 Chlorine, gaseous, dry 4 4 4 4 4 Chlorine, gaseous, wet 4 4 4 4 4 Chlorine water 4 4 4 4 4 Chloroberzene 4 4 4 4 4 Chloroberzene 4 4 4 4 4 Chloroberzene 4 4 4 4 4 Chlorosulphonic acid 4 4 4 4 4 Chromium saits 1 1 1 1 1 Chromium trioxide 1 1 1 1 3 Chromium trioxide 3 3 3 3 3 3 Chromium trioxide 1 1 1 4 4 4 Chromium trioxide 3 <	Calcium sulphate	1	1	1	1	1			
Chlorine, liquid 4 4 4 4 Chlorine, gaseous, dry 4 4 4 4 Chlorine, gaseous, wet 4 4 4 4 Chlorine, gaseous, wet 4 4 4 4 Chlorobenzene 4 4 4 4 4 Chlorobenzene 4 4 4 4 4 Chlorobenzene 4 4 4 4 4 Chlorobuphonic acid 4 4 4 4 4 Chromium salts 1 1 1 1 1 Chromium salts 1 1 1 1 1 Chromium trioxide 1 1 1 3 3 3 3 3 3 3 3 Chromium trioxide 1 1 1 1 1 4 3 Crosols 3 3 3 3 3 3 3 4 </td <td>Carbon disulphide</td> <td>4</td> <td>4</td> <td>3</td> <td>4</td> <td>4</td>	Carbon disulphide	4	4	3	4	4			
Chlorine, gaseous, dry44444Chlorine, gaseous, wet44444Chlorine water41343Chlorobenzene444444Chlorosulphonic acid44444Chlorosulphonic acid44444Chromium salts11111Chromium trixxide11111Chromium trixxide11143Cresols333333Cresols, aqueous333333Cyclohexano44444Cyclohexano44444Cyclohexano44444Dibutyl phthalate34144Dibutyl phthalate34344Dibutyl phthalate44444Dibutyl phthalate44444Dibutyl phthalate44444Dibutyl phthalate44444Dibutyl phthalate44444Dibutyl phthalate44444Dibutyl phthalate44444Dibutyl phthalate44444<	Carbon tetrachloride	3	4	4	4	3			
Chronine, gaseous, wet4444Chlorobenzene44444Chlorobenzene44444Chlorobenzene44444Chlorobenzene44444Chlorosulphonic acid44444Chromic acid44444Chromium salts11111Chronium trixxide11114Copper salts11113Cresols333333Cresols, aqueous33333Cyclohexano44444Cyclohexanone4444Dietryl ether4444Dietryl ether4444Dietryl formamide4444Dietryl fornamide4444Dietryl fornamide4434Lip alcohol, non-denatured 50%13311Ethyl alcohol, non-denatured 50%13111Ethyl alcohol, non-denatured 50%13311Ethyl alcohol, non-denatured 50%13311Ethyl alcohol, non-denatured 50%13111Ethyl alcohol, non-denature	Chlorine, liquid	4	4	4	4	4			
Chlorine water 4 1 3 4 3 Chlorobenzene 4 4 4 4 4 Chlorobenzene 4 4 4 4 4 Chlorobuponic acid 4 4 4 4 4 Chromic acid 4 4 4 4 4 Chromium saits 1 1 1 1 1 1 Chromium trioxide 1 1 1 1 1 3 Chromium trioxide 3 3 3 3 3 3 Cresols 3 3 3 3 3 3 3 Cresols, aqueous 3 3 3 3 3 3 3 Cyclohexanol 4 4 4 4 4 4 4 Dibutyl phthalate 3 4 4 4 4 4 4 4 4 4 4 4 </td <td>Chlorine, gaseous, dry</td> <td>4</td> <td>4</td> <td>4</td> <td>4</td> <td>4</td>	Chlorine, gaseous, dry	4	4	4	4	4			
Chiorobenzene44444Chiorosuphonic acid44444Chiorosuphonic acid44444Chromic acid44444Chromic acid411111Chromium trixide111111Chromium trixide1111333Chromium trixide3333333Cresols3333333Cresols, aqueous3333333Cyclohexano444444Cyclohexanone444444Dibuty lether444444Dibuty lether444444Dibuty lether444444Dibuty lether444444Dibuty lether4444444Dibuty lether4444444Dibuty lether44444444Dibuty lether44444444444444444444444 <td>Chlorine, gaseous, wet</td> <td>4</td> <td>4</td> <td>4</td> <td>4</td> <td>4</td>	Chlorine, gaseous, wet	4	4	4	4	4			
Chloroform 4 4 4 4 4 Chlorosulphonic acid 4 4 4 4 4 Chromic acid 4 4 4 4 4 Chromic acid 4 4 4 4 4 Chromium salts 1 1 1 1 1 Chromium trioxide 1 1 1 1 1 4 Chromium trioxide 1 1 1 1 1 4 Chromium trioxide 3 3 3 3 3 3 3 Chromium salts 1 1 1 1 1 4 4 Chromium salts 1 1 1 1 4 3 3 3 3 3 3 3 3 3 3 3 3 3 3 4 4 4 4 4 4 4 4 4 4 4 <td>Chlorine water</td> <td>4</td> <td>1</td> <td>3</td> <td>4</td> <td>3</td>	Chlorine water	4	1	3	4	3			
Chlorosulphonic acid44444Chromiun caid44444Chromium salts11111Chromium trioxide11111Chromium trioxide11114Copper salts11113Cresols33343Cresols, aqueous33333Cyclohexanol44444Cyclohexanol44444Dibutyl phthalate34344Dibutyl phthalate34344Dibutyl phthalate34344Dibutyl phthalate44444Dibutyl phthalate33311Thyl acetate44344Ether44344Ethyl acetate4434Ethyl acetate4444Ethyl acetate4444Ethyl acetate4444Ethyl acetate4444Ethyl acetate4444Ethyl acetate4444Ethyl acetate4444Ethyl acetate4444<	Chlorobenzene	4	4	4	4	4			
Chromic acid44444Chromium saits111111Chromium trioxide111111Chromium trioxide41114Copper salts11113Cresols33343Cresols, aqueous33333Cyclohexano4444Cyclohexano4444Cyclohexanone4444Dibutyl phthalate3444Dibutyl phthalate3444Dibutyl phthalate4444Dibutyl phthalate4444Dibutyl phthalate4444Dibutyl phthalate3444Dibutyl phthalate4444Dibutyl phthalate4444Dibutyl phthalate4444Dibutyl phthalate3444Dibutyl phthalate4444Dibutyl phthalate4444Dibutyl phthalate4444Dibutyl phthalate4444Dibutyl phthalate4444Dibutyl phthalate4444Ethyl accohol, non-denatured 1	Chloroform	4	4	4	4	4			
Chromic acid44444Chromium salts111111Chromium trioxide111111Chromium trioxide411114Copper salts11113333Cresols33333333Cresols, aqueous3333333Cyclohexanol444444Cyclohexanol444444Cyclohexanol444444Dibutyl phthalate341444Dibutyl phthalate343444Dibutyl phthalate343444Dibutyl phthalate343444Dibutyl phthalate343444Dibutyl phthalate343444Dibutyl phthalate444444Dibutyl phthalate344444Dibutyl phthalate443444Dibutyl phthalate44444444Dibutyl phthalate444444444 </td <td>Chlorosulphonic acid</td> <td>4</td> <td>4</td> <td>4</td> <td>4</td> <td>4</td>	Chlorosulphonic acid	4	4	4	4	4			
Chromium trioxide 1 1 1 1 1 Ctric acid 4 1 1 1 1 3 Copper salts 1 1 1 1 1 3 Cresols 3 3 3 3 3 3 Cresols, aqueous 3 3 3 3 3 3 Cyclohexane 4 4 4 4 4 4 Cyclohexanone 4 4 4 4 4 4 Dibutyl phthalate 3 4 1 4 4 4 Dibutyl phthalate 3 4 4 4 4 4 Dibutyl phthalate 4 4 3 4 4 Dibutyl phthalate 3 4 4 4 4 Dibutyl phthalate 4 4 4 4 4 Dibutyl phthalate 4 4 4 4 4 <td></td> <td>4</td> <td>4</td> <td>4</td> <td>4</td> <td>4</td>		4	4	4	4	4			
Citric acid 4 1 1 1 1 Copper salts 1 1 1 1 1 3 Cresols, aqueous 3 3 3 3 3 3 Cresols, aqueous 3 3 3 3 3 3 Cyclohexane 4 4 4 4 4 4 Cyclohexanone 4 4 4 4 4 4 Cyclohexanone 4 4 4 4 4 4 Dibutyl phthalate 3 4 1 4 4 Dibutyl phthalate 3 4 4 4 4 Dibutyl phthalate 4 4 4 4 4 4 <td< td=""><td>Chromium salts</td><td>1</td><td>1</td><td>1</td><td>1</td><td>1</td></td<>	Chromium salts	1	1	1	1	1			
Copper salts11111113Cresols33333333Cresols, aqueous3333333Cyclohexane4444444Cyclohexanone4444444Decahydronaphthalene4444444Dibutyl phthalate34144444Dibutyl phthalene44344<	Chromium trioxide	1	1	1	1	1			
Cresols 3 3 3 4 3 Cresols, aqueous 3 3 3 3 3 Cyclohexane 4 4 4 1 4 Cyclohexanol 4 4 4 4 4 Dichyl phthalate 3 4 1 4 4 Dibutyl phthalate 3 4 4 4 4 Dibutyl phthalate 3 4 4 4 4 Dimethyl formamide 4 4 4 4 4 Lithyl acetate 4 4 4 4 4 Ethyl acetate 4 4 4 4 4 Ethyl acetate 4 4 4 4 4 4 <td>Citric acid</td> <td>4</td> <td>1</td> <td>1</td> <td>1</td> <td>4</td>	Citric acid	4	1	1	1	4			
Cresols 3 3 3 4 3 Cresols, aqueous 3 3 3 3 3 Cyclohexane 4 4 4 1 4 Cyclohexanon 4 4 4 4 4 Cyclohexanone 4 4 4 4 4 Cyclohexanone 4 4 4 4 4 Dichylothihalene 4 4 4 4 4 Dibutyl phthalate 3 4 1 4 4 Dibutyl phthalate 3 4 4 4 4 Dibutyl phthalate 3 4 4 4 4 Dimethyl formamide 4 4 4 4 4 Dimethyl formamide 4 4 4 4 4 Ether 4 4 4 4 4 4 Ethyl acetate 4 4 4 4 4	Copper salts	1	1	1	1	3			
Cyclohexane 4 4 4 1 4 Cyclohexanol 4 4 4 4 4 Cyclohexanone 4 4 4 4 4 Decahydronaphthalene 4 4 4 4 4 Dibutyl phthalate 3 4 1 4 4 Dibutyl phthalate 3 4 1 4 4 Dibutyl phthalate 3 4 1 4 4 Dimethyl formamide 4 4 3 4 4 Dimethyl formamide 4 4 3 4 4 Lt Dioxan 4 4 3 4 4 Ether 4 4 3 4 4 Ethyl acetate 4 4 3 4 4 Ethyl acetate 4 4 4 4 4 Ethyl acetate 1 3 1 1 1		3	3	3	4	3			
Cyclohexane4444Cyclohexanol4444Cyclohexanone4444Decahydronaphthalene4444Dibutyl phthalate3414Dibutyl phthalate3414Dibutyl phthalate3444Dibutyl phthalate4444Dibutyl phthalate4444Dibutyl phthalate4444Dibutyl phthalate4444Dibutyl phthalate4434Dibutyl phthalate4434Dibutyl phthalate4434Dibutyl phthalate4434Dibutyl phthalate4434Dibutyl phthalate4434Dibutyl phthalate4434Li Dioxan4444Ethyl acetate4441Ethyl acohol, non-denatured 100%13311Ethyl alcohol, non-denatured 50%1311Ethyl alcohol, non-denatured 50%1311Ethyl alcohol, non-denatured 50%1311Ethyl alcohol, non-denatured 50%1311Ethyl alcohol, non-denatured 50%1311Ethy	Cresols, aqueous	3	3	3	3	3			
Cyclohexanol44444Cyclohexanone44444Decahydronaphthalene44444Dibutyl phthalate34144Dibthyl ether44444Dimethyl formamide44344Dimethyl formamide44344Dimethyl formamide44344Ether44344Ether44344Ethyl acetate4434Ethyl alcohol, non-denatured 100%11331111Ethyl alcohol, non-denatured 96%11331111Ethyl alcohol, non-denatured 10%1133111Ethyl alcohol, non-denatured 10%11331111Ethyl alcohol, non-denatured 10%113111111Ethyl alcohol, non-denatured 10%113111111Ethyl alcohol, non-denatured 10%113111111Ethyl alcohol, non-denatured 10%113111111Ethyl benzene444444Ethyl benzene444444Ethyl benzene11311111111Formaldehyde113<		4	4	4	1	4			
Cyclohexanone4444Decahydronaphthalene44444Dibutyl phthalate34144Diethyl ether444444Dimethyl formamide443444Dimethyl formamide443444Dimethyl formamide443444Ether443444Ether444344Ethyl acetate44311Ethyl alcohol, non-denatured 100%13311Ethyl alcohol, non-denatured 96%13311Ethyl alcohol, non-denatured 96%13311Ethyl alcohol, non-denatured 10%13311Ethyl alcohol, non-denatured 10%13111Ethyl alcohol, non-denatured 10%13 <t< td=""><td></td><td>4</td><td>4</td><td>4</td><td>4</td><td>4</td></t<>		4	4	4	4	4			
Dibutyl phthalate 3 4 1 4 4 Diethyl ether 4 4 4 4 4 Dimethyl formamide 4 4 3 4 4 Dimethyl formamide 4 4 3 4 4 1.4 Dioxan 4 4 3 4 4 Ether 4 4 3 4 4 Ethyl acetate 4 4 3 4 4 Ethyl acetate 4 4 3 4 4 Ethyl alcohol, non-denatured 96% 1 3 3 1 1 Ethyl alcohol, non-denatured 50% 1 3 3 1 1 Ethyl alcohol, non-denatured 50% 1 3 3 1 1 1 Ethyl alcohol, non-denatured 10% 1 3 1 1 1 1 Ethyl alcohol, non-denatured 50% 1 3 1 1 1 1 1<	-	4	4	4	4	4			
Dibutyl phthalate34144Diethyl ether44444Dimethyl formamide44344Dimethyl formamide443441.4 Dioxan44344Ether44444Ethyl acetate44434Ethyl acetate44311Ethyl alcohol, non-denatured 100%13311Ethyl alcohol, non-denatured 96%13311Ethyl alcohol, non-denatured 50%13311Ethyl alcohol, non-denatured 10%13111Ethyl alcohol, non-denatured 10%13111Ethyl alcohol, non-denatured 50%13111Ethyl alcohol, non-denatured 10%13111Ethyl alcohol, non-denatured 10%1311<	Decahydronaphthalene	4	4	4	4	4			
Diethyl ether4444Dimethyl formamide443441.4 Dioxan44344Ether444444Ethyl acetate44434Ethyl acetate44311Ethyl alcohol, non-denatured 100%13311Ethyl alcohol, non-denatured 96%13311Ethyl alcohol, non-denatured 96%13311Ethyl alcohol, non-denatured 96%13111Ethyl alcohol, non-denatured 96%1 <t< td=""><td></td><td>3</td><td>4</td><td>1</td><td>4</td><td>4</td></t<>		3	4	1	4	4			
Dimethyl formamide443441.4 Dioxan44344Ether44444Ethyl acetate44434Ethyl acetate44341Ethyl acetate43311Ethyl alcohol, non-denatured 100%13311Ethyl alcohol, non-denatured 96%13311Ethyl alcohol, non-denatured 50%13311Ethyl alcohol, non-denatured 50%13111Ethyl alcohol, non-denatured 50%1 <t< td=""><td></td><td>4</td><td>4</td><td>4</td><td>4</td><td>4</td></t<>		4	4	4	4	4			
1.4 Dioxan 4 4 3 4 4 Ether 4 4 4 4 4 4 Ethyl acetate 4 4 4 3 4 Ethyl acetate 4 4 4 3 4 Ethyl acetate 4 4 3 4 Ethyl acetate 4 4 3 4 Ethyl acetate 4 4 4 3 4 Ethyl acohol, non-denatured 96% 1 3 3 1 1 Ethyl alcohol, non-denatured 50% 1 3 3 1 1 1 Ethyl alcohol, non-denatured 10% 1 3 3 1 1 1 Ethyl alcohol, non-denatured 10% 1 3 1 </td <td></td> <td>4</td> <td>4</td> <td>3</td> <td>4</td> <td>4</td>		4	4	3	4	4			
Ethyl acetate 4 4 4 3 4 Ethyl alcohol, non-denatured 100% 1 3 3 1 1 Ethyl alcohol, non-denatured 96% 1 3 3 1 1 Ethyl alcohol, non-denatured 96% 1 3 3 1 1 Ethyl alcohol, non-denatured 50% 1 3 3 1 1 Ethyl alcohol, non-denatured 50% 1 3 1 1 1 Ethyl alcohol, non-denatured 10% 1 3 1 1 1 Ethyl alcohol, non-denatured 10% 1 3 1 1 1 Ethyl alcohol, non-denatured 10% 1 3 1 1 1 Ethyl alcohol, non-denatured 10% 1 3 1 1 1 1 Ethyl alcohol, non-denatured 10% 4 4 4 4 4 4 4 Ethyl alcohol, non-denatured 10% 1 3 1 1 1 1 1 <		4	4	3	4	4			
Ethyl alcohol, non-denatured 100%13311Ethyl alcohol, non-denatured 96%13311Ethyl alcohol, non-denatured 50%13311Ethyl alcohol, non-denatured 50%13311Ethyl alcohol, non-denatured 10%13311Ethyl alcohol, non-denatured 10%13111Ethyl alcohol, non-denatured 10%13111Ethyl benzene444444Ethyl benzene444444Ethyl chloride444444Ethyl hexanol131111Formaldehyde1313311Formic acid, dilute4113333Glycerine, aqueous1111111Glycol, aqueous1331111Heptane1333111	Ether	4	4	4	4	4			
Ethyl alcohol, non-denatured 100%13311Ethyl alcohol, non-denatured 96%13311Ethyl alcohol, non-denatured 50%13311Ethyl alcohol, non-denatured 50%13311Ethyl alcohol, non-denatured 10%13311Ethyl alcohol, non-denatured 10%13111Ethyl alcohol, non-denatured 10%13111Ethyl benzene444444Ethyl benzene444444Ethyl chloride444444Ethyl hexanol131111Formaldehyde1313311Formic acid, dilute4113333Glycerine, aqueous1111111Glycol, aqueous1331111Heptane1333111	Ethyl acetate	4	4	4	3	4			
Ethyl alcohol, non-denatured 96% 1 3 3 1 1 Ethyl alcohol, non-denatured 50% 1 3 3 1 1 Ethyl alcohol, non-denatured 10% 1 3 3 1 1 Ethyl alcohol, non-denatured 10% 1 3 1 1 1 Ethyl alcohol, non-denatured 10% 1 3 1 1 1 Ethyl benzene 4 4 4 4 4 Ethyl chloride 4 4 4 4 4 Ethyl chloride 4 4 4 4 4 2-Ethyl hexanol 1 3 1 1 1 Formaldehyde 1 3 1 3 3 Glycerine, aqueous 1 1 1 1 1 Glycol, aqueous 1 1 1 1 1 Glycol, aqueous 1 3 3 1 1 Glycol, aqueous <t< td=""><td></td><td>1</td><td>3</td><td>3</td><td></td><td>1</td></t<>		1	3	3		1			
Ethyl alcohol, non-denatured 50% 1 3 3 1 1 Ethyl alcohol, non-denatured 10% 1 3 1 1 1 Ethyl benzene 4 4 4 4 4 Ethyl benzene 4 4 4 4 4 Ethyl chloride 4 4 4 4 4 Ethyl chloride 4 4 4 4 4 Ethyl chloride 4 4 4 4 4 Ethylene chloride 4 4 4 4 4 2-Ethyl hexanol 1 3 1 1 1 Formaldehyde 1 3 1 1 1 1 Formic acid, dilute 4 1 1 1 1 1 1 Glycerine, aqueous 1 1 1 1 1 1 1 Glycol, aqueous 1 1 1 1 1 1 </td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>									
Ethyl alcohol, non-denatured 10%1311Ethyl benzene44444Ethyl benzene44444Ethyl chloride44444Ethyl chloride44444Ethylene chloride13111Setthyl hexanol13111Formaldehyde13131Formic acid, dilute41133Glycerine, aqueous11111Glycol13111Glycol, aqueous11111Heptane13311									
Ethyl benzene 4 4 4 4 Ethyl chloride 4 4 4 4 4 Ethyl en chloride 4 4 4 4 4 Ethyl en chloride 4 4 4 4 4 2-Ethyl hexanol 1 3 1 1 1 Formaldehyde 1 3 1 3 1 Formic acid, dilute 4 1 1 3 3 Glycerine, aqueous 1 1 1 1 1 Glycol, aqueous 1 3 1 1 1 Heptane 1 3 3 1 1 1									
Ethyl chloride 4 4 4 4 4 Ethyl en chloride 4 4 4 4 4 2-Ethyl hexanol 1 3 1 1 1 Formaldehyde 1 3 1 3 1 Formic acid, dilute 4 1 1 3 3 Glycerine, aqueous 1 1 1 1 1 Glycol, aqueous 1 3 1 1 1 Heptane 1 3 3 1 1 1									
Ethylene chloride 4 4 4 4 2-Ethyl hexanol 1 3 1 1 1 Formaldehyde 1 3 1 3 1 Formic acid, dilute 4 1 3 3 3 Glycerine 1 1 1 1 1 Glycerine, aqueous 1 1 1 1 1 Glycol 1 3 1 1 1 1 Glycol, aqueous 1 3 1 1 1 1 Heptane 1 3 3 1 1 1									
2-Ethyl hexanol 1 3 1 1 Formaldehyde 1 3 1 3 1 Formaldehyde 1 3 1 3 1 Formic acid, dilute 4 1 1 3 3 Glycerine 1 1 1 1 1 Glycerine, aqueous 1 1 1 1 1 Glycol 1 3 1 1 1 1 Glycol, aqueous 1 3 1 1 1 1 Heptane 1 3 3 1 1 1									
Formaldehyde 1 3 1 3 1 Formic acid, dilute 4 1 1 3 3 Glycerine 1 1 1 3 3 Glycerine 1 1 1 1 1 Glycerine, aqueous 1 1 1 1 1 Glycol, aqueous 1 3 1 1 1 Glycol, aqueous 1 1 1 1 1 1 Heptane 1 3 3 3 1 1 1									
Formic acid, dilute 4 1 1 3 3 Glycerine 1 1 1 1 1 1 Glycerine, aqueous 1 1 1 1 1 1 Glycol 1 3 3 1 1 1 1 Glycol, aqueous 1 3 1 1 1 1 1 Heptane 1 3 3 3 1 1 1									
Glycerine 1 1 1 1 Glycerine, aqueous 1 1 1 1 1 Glycol 1 3 1 1 1 1 Glycol, aqueous 1 3 1 1 1 1 Heptane 1 3 3 1 1 1									
Glycerine, aqueous 1 1 1 1 Glycol 1 3 1 1 1 Glycol, aqueous 1 1 1 1 1 Heptane 1 3 3 1 1 1									
Glycol 1 3 1 1 Glycol, aqueous 1 1 1 1 Heptane 1 3 3 1 1									
Glycol, aqueous 1 1 1 1 Heptane 1 3 3 1 1									
Heptane 1 3 3 1 1									
	Hexane	1	3	3	1	1			
Hydrochloric acid, conc. 3 1 4 3 1									





Resistance to Materials: Belting (continued)

Legend: 1 = Good resistance 3 = Limited resistance 4 = Not recommended					
Materials	Urethane	PVC (non FDA)	Silicone	Polyester	Urethane (hard)
Hydrochloric acid 10 %	3	1	1	1	1
Hydrofluoric acid 40 %	4	4	4	4	4
Hydrogen chloride, gaseous, dilute	3	1	3	3	1
Hydrogen chloride, gaseous, conc.	3	3	3	4	3
Hydrogen peroxide 10%	3	1	1	3	1
Hydrogen sulphide	3	3	3	3	3
Iron salts (sulphate)	1	1	1	1	1
Isooctane	1	3	3	1	1
Isopropyl alcohol	1	3	1	1	1
Lactic acid	1	3	1	1	1
Magnesium salts	1	1	1	1	1
Mercury	1	1	1	1	1
Mercury salts	1	1	1	1	1
Methyl alcohol, aqueous 50 %	3	3	1	1	1
Methyl alcohol (methanol)	1	3	1	1	1
Methyl ethyl ketone	4	4	1	3	4
Methylene chloride	4	4	4	4	4
Naphthalene	3	4	4	3	4
Nickel salts	1	1	1	1	1
Nitric acid	4	3	4	4	4
Nitrobenzene	4	4	1	3	4
Octane (see also isooctane)	1	3	4	1	1
Oleic acid	1	3	4	1	1
Oxalic acid	1	1	1	1	1
Ozone	1	3	3	1	3
Perchloroethylene	4	4	4	4	4
Phenol	3	3	1	4	3
Phenol, aqueous	4	3	1	4	3
Phosphoric acid 85 %	4	1	1	3	1
Phosphoric acid 50 %	1	1	1	1	1
Phosphoric acid 10 %					
	1	1	1	1	1
Phosphorus pentoxide	1 4	1	1	3	1
Potash lye 50 %	4		4	3 1	4
Potash lye 25 %		1			
Potash lye 10 % Potassium carbonate (potash)	4	1	3	1	4
		1	1	1	1
Potassium chlorate	1	1	1	1	1
Potassium chloride	1	1	1	1	1
Potassium dichromate	1	1	1	1	1
Potassium iodide	1	1	1	1	1
Potassium nitrate	1	1	1	1	1
Potassium permanganate	1	1	1	1	1
Potassium persulphate	1	1	1	1	1
Potassium sulphate	1	1	1	1	1
Propane, gaseous	1	1	1	1	1
Propane, liquid	1	1	1	1	1

34

TECHNICAL DATA AND CALCULATIONS



Resistance to Materials: Belti	ng (continued	<i>Ŋ</i>			
Legend: 1 = Good resistance 3 = Limited resistance 4 = Not recommended					
Materials	Urethane	PVC (non FDA)	Silicone	Polyester	Urethane (hard)
Pyridine	4	4	3	4	4
Silver salts	1	1	1	1	1
Soda lye 50% (see potash lye)	4	1	4	4	4
Soda lye 25%	4	1	4	3	4
Soda lye 10%	4	1	3	1	4
Sodium bisulphite	1	1	1	1	1
Sodium carbonate (natron)	1	1	1	1	1
Sodium carbonate (soda)	1	1	1	1	1
Sodium chlorate	1	1	1	1	1
Sodium chloride (common salt)	1	1	1	1	1
Sodium hydroxide (caustic soda)	4	1	4	1	4
Sodium hypochlorite	1	1	1	3	1
Sodium nitrate	1	1	1	1	1
Sodium nitrite	1	1	1	1	1
Sodium perborate	1	1	1	1	1
Sodium phosphate	1	1	1	1	1
Sodium sulphate (Glauber salt)	1	1	1	1	1
Sodium sulphide	1	1	1	1	1
Sodium sulphite	1	1	1	1	1
Sodium thiosulphate (fixing salt)	1	1	1	1	1
Stearic acid	1	1	1	1	1
Succinic acid	1	1	1	1	1
Sulphur	1	1	1	1	1
Sulphur dioxide	3	3	3	3	4
Sulphuric acid 96%	4	4	4	4	4
Sulphuric acid 50%	4	3	4	3	4
Sulphuric acid 25%	4	3	3	1	3
Sulphuric acid 10%	4	3	1	1	3
Tartaric acids	1	1	1	1	1
Tetrachloroethane	4	4	4	4	4
Tetrachloroethylene (perchloroethylene)	4	4	4	4	4
Tetrahydrofuran	4	4	4	4	4
Tetrahydronaphthalene	4	4	4	4	4
Thiophene	4	4	4	4	4
Tin II chlorides	1	1	1	1	1
Toluene	4	4	4	4	4
Trichloroethylene	4	4	4	4	4
Urea, aqueous	1	1	1	1	1
Water	1	1	1	1	1
Xylene	4	4	4	3	4
Zinc salts	1	1	1	1	1





Resistance to Materials: Belting (continued)

Legend: 1 = Good resistance 3 = Limited resistance 4 = Not recommended					
Materials	Urethane	PVC (non FDA)	Silicone	Polyester	Urethane (hard)
Products					
Alum	1	1	1	1	1
Anti-freeze*	1	3	1	1	1
Aqua regia	4	4	4	4	4
Asphalt	1	3	3	1	1
Battery acid	4	4	4	4	4
Benzine	1	3	3	1	1
Bleaching lye (12.5%)	1	1	1	1	3
Bone oil	1	3	4	1	1
Borax	1	1	1	1	1
Brake fluid* Bosch	1	3	1	1	3
Brake fluid* Skydrol	4	4	3	4	4
Chloride of lime (aqueous suspension)	1	1	1	1	3
Chlorine (active)	4	4	4	4	4
Chrome baths* (technical)	1	3	3	1	1
Chromosulphuric acid	4	4	4	4	4
Cresol solution	3	3	4	4	4
Diesel oil	1	1	3	1	1
Fertilizer salts	1	1	1	1	1
Fixing salt	1	1	1	1	1
Floor wax	1	3	3	1	1
Formalin	1	3	3	1	1
Fuel oils*	1	1	3	1	1
Furniture polish*	1	3	3	1	1
Gypsum	1	1	1	1	1
lnk*	1	1	1	1	1
Linseed oil	1	3	1	1	1
Litex (styrene)	4	4	4	4	4
Mineral oils (non-aromatic)	1	1	1	1	1
Moth balls	3	4	3	3	3
Diesel oil*	1	1	3	1	1
Petrol (gasoline) DIN51635	1	3	3	1	1
Petrol, regular	1	3	3	1	1
Petrol, super	3	4	3	1	3
Motor oils*	1	1	1	1	1
Oil no. 3 (ASTM)	1	3	1	1	1
Oleum	4	4	4	4	4
Paraffin	1	1	1	1	1
Paraffin oil	1	1	1	1	1
Petroleum	1	3	3	1	1
Petroleum ether	1	3	4	1	1
Photographic developer	1	1	1	1	1






Bearings and Lubrication:

All bearings on AquaGard LP Series Conveyors are sealed and lubricated for life. No grease zerk is available and no greasing over the life of the product is required.

All gearmotors used on AquaGard LP Series conveyor are sealed and may be mounted in any position. Changing gear oil lubrication may be needed over the life of the gearbox. Please check the appropriate gearmotor manual for instructions.


Support Stand Locations:

Support Stand Locations					
Symbol	Description	tance			
Symbol	Description	mm	in		
А	Maximum distance back at drive end	188	7.4		
В	Maximum distance back at idler end	156	6.1		
С	Maximum distance between supports	1400	55.1		

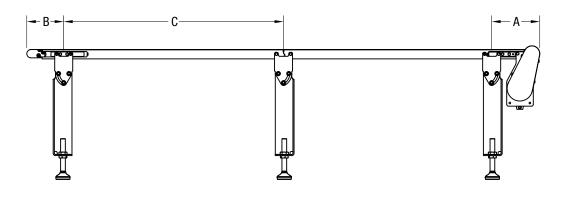

Conveyor Drive Shaft Tolerances:

End Drive and Belted:

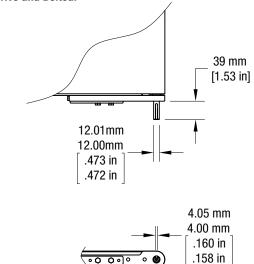

Note: Dimensions = mm (in)






Conveyor Noise Level (Decibel Ratings)

The actual noise level generated by the conveyor depends on several factors; the installation configuration, the product running on the conveyor, the surrounding equipment, the conveyor options and belt speed. The noise level generated by the conveyor is typically less than the general noise level of factory equipment.

Generally a higher belt speed will result in a higher noise level. The following charts provide basic decibel ratings for a typical conveyor arrangements.

Belted Conveyors:

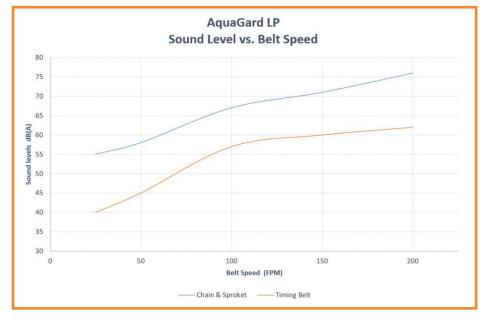

Maximum Load Capacity

The following Load Capacity Charts **do not** take into account the conveyor configuration, length or gearmotor selection. Your specific conveyor may not be capable of the maximum load condition. Please confirm your maximum load per application with the Dorner DTools program at www.dornerconveyors.com.

All load capacities shown are non-accumulated evenly distributed loads.

AquaGard	AquaGard LP Series Belted End Drive Conveyor						
Belt	Width	Pulling the Belt		Pushing	the Belt		
mm	in	Kg	Lb	Kg	Lb		
70	(2.75)	14	31	7	15		
95	(3.75)	16	35	8	18		
152	(6)	18	40	9	20		
203	(8)	23	51	12	26		
254	(10)	27	60	14	31		
305	(12)	27	60	14	31		
406	(16)	27	60	14	31		
457	(18)	27	60	14	31		





No Load Torque:

No load torque is the amount of torque required to turn an empty conveyor. The torque value varies by conveyor length and configuration. The following charts provide basic values for an average length conveyor. Your specific conveyor may not be have a higher value. Please confirm your no load torque and maximum load per application with the Dorner DTools program at www.dornerconveyors.com.

Belted Conveyor No Load Torque				
Belt Width mm (in)	Belted End Drive Nm (in-lbs)			
70 (2.75)	0.6 (5)			
95 (3.75)	0.7 (6)			
152 (6)	0.9 (8)			
203 (8)	1.1 (10)			
254 (10)	1.4 (12)			
305 (12)	1.6 (14)			
406 (16)	1.8 (16)			
457 (18)	1.9 (17)			

Belting and Coefficient of Friction

The coefficient of friction is used to determine the load a conveyor can carry. It effects a conveyor in two ways: the friction that exists between the conveyor belt and the bed surface, and if accumulating product, the friction that exists between the conveyor top surface and the product.

>1.0, do not accumulate

Coefficient of Friction, between the bottom of the conveyor belt and bed surface:

Product	Surfaces	Application Condition	Coefficient of Friction
AquaGard LP Series Belted	Impregnated polyester fabric to anodized aluminum bed plate	Dry	0.33

AquaGard LP Series Belt The following table provides the coefficient of friction between steel product and various belt top surfaces. All factors below are assuming dry conditions. **Coefficient of Friction Belt Number Top Surface Material and Type** 01, 54, 58, 68, 73, 81 0.40 Smooth hard urethane 0.50 02, 59, 60, 61, 66, 72, 76, 79 Smooth medium urethane 03, 19, 55, 69, 75, 77, 78, 80 Glossy soft urethane >1.0, do not accumulate 05, 06, 50, 53, 63 Impregnated polyester fabric 0.20

PVC, Very High friction

Coefficient of Friction, between the top surface of conveyor belt and product:



08, 18, 64



Calculating Conveyor Load Capacity

There are several factor that effect the overall conveyor load of AquaGard LP Series Conveyor. These include:

- Conveyor size and configuration
- Conveyor speed
- Application temperature
- Product accumulation
- Number of starts and stops per hour

Located online at www.dornerconveyors.com is the Dorner conveyor configuration tool, DTools. This tool allows you to configure your conveyor layout and determine the maximum load capacity for the conveyor. It is suggested that this program be used to calculate the conveyor load as the calculation is quite complicated. This configuration program however does not take into account temperature, dirty conditions, and conveyor starts and stops. If these conditions are part of your application please use the load reducing factors as shown below.

Maximum Load = (Load from DTools)(Temperature Factor)(Start/Stop Factor)

Temperature Factor			Start / Stop Factor	
Ambient temperature can negatively affect the capacity of the conveyor.			Frequent Start / Stops of the conveyor can negatively affect the capacity of conveyor. All start / stop applications must use a soft start mechanism su	
Temperature C	Temperature Factor	as a Frequency Inverter with a 1 second acceleration cycle.		celeration cycle.
-20	1.0		Application Condition	Start / Stop Factor
0			Continuous Run or 1 start/stop per hour	1.0
20			Maximum 10 starts/stop per hour	0.83
			Maximum 30 starts/stop per hour	0.70
			Greater than 30 starts/stop per hour	0.62
		Temperature C Temperature Factor -20 1.0 0 1.0 20 1.0 40 0.9	Temperature C Temperature Factor -20 1.0 0 1.0 20 1.0 40 0.9	Temperature CTemperature Factor-201.001.0201.0201.0400.9Creater than 30 starts/stop per hourGreater than 30 starts/stop per hour

Calculating Conveyor Belt Speed:

AquaGard LP Series Conveyors:

To calculate the conveyor belt speed you need to know the following factors:

- DR = Drive roller diameter or drive sprocket pitch diameter (mm)
 - = 31.75 mm (1.25 in) for end drive belted conveyors
- TD = Number of teeth of pulley located at drive roller (if equipped)
- TG = Number of teeth of pulley located at gearmotor (if equipped)
- RPM = Revolutions per minute of gearmotor

Belt Speed (m/min) = $RPM^{(TD/TG)}(DR/1000)^{3.14}$

Example:

AquaGard LP Series Belted End Drive, bottom mount with a 32 tooth pulley located at the drive roller and a 22 tooth pulley located on the gearmotor. The gearmotor is a 10:1 ratio with 172 rpm output.

Belt Speed $(m/min) = (172)^{*}(32/22)^{*}(31.75/1000)^{*}3.14$ Belt speed (m/min) = 25 m/minBelt speed $(ff/min) = 25 m/min^{*}(3.28) = 82 ff/min$





Dorner AquaGard Conveyors are Best for:

- Baking
- Packaged Foods
- Pet Foods

Secondary Packaging

Snack Foods

• Tight Transfers

- Confectionary
- Elevation Changes
- And More!

- **AquaGard LP Series Specifications***
 - Belted and Cleated Belt Models
 - Loads up to 22.7 kg (50 lbs)
 - Widths: 70 mm (2.75 in) to 457 mm (18 in)
 - Lengths: 500 mm (19.1 in) to 8,485 mm (18 ft)
 - Robust welded 304 Stainless Steel frame
 - Available in straights only



7350 Series Specifications

- Belted, Cleated Belt, Modular Belt, Modular Cleated Belt Models and Positive Drive Options
- Loads up to 341 kg (750 lbs)
- Widths: 152 mm (6 in) to 914 mm (36 in)
- Lengths: 914 mm (3 ft) to 25,000 mm (82 ft)
- FDA approved belting and plastic components
- 304 Stainless Steel frame
- · Available in straights, curves or Z-Frame configurations



Straights

Curves (Modular Belt Only) LPZ (Z-Frames), Nose Over & Horizontal to Incline

Positive Drive

Options



Nose Bar TransfersPowered TransfersVariety of Guiding OptionsOther options available including Roller Transfers, Chutes, Drip Pans, Formed Angle Stands, Hoppers and more.


*Please refer to the AquaGard 7350 Series manual for product information.



Industrial & Automation Conveyors





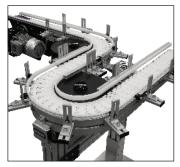



Sanitary Conveyors





Parts & Service





Engineered Solutions

Online Configurator

Tools

Warranty

1111





TRANSFORMING CONVEYOR AUTOMATION

Dorner – Europe

Dorner GmbH Jülich Germany +49 (0) 2461/93767-0 info.europe@dorner.com

Dorner – Asia

Dorner (M) Sdn. Bhd. Penang Malaysia +604-626-2948 info.asia@dorner.com

Dorner – North & South America

Dorner Mfg. Corp. Hartland, WI USA +1-262-367-7600 info@dorner.com Dorner SARL Velizy-Villacoublay France +33 (0)1 84 73 24 27 info.france@dorner.com



dornerconveyors.com

© Dorner Mfg. Corp. 2023. All Rights Reserved. 851-972-EU-EN 0723

Dorner Conveyors Ltd. Burlington, Ontario Canada +1-289-208-7306 info@dorner.com Dorner Latin America, S. de R.L. de C.V. Zapopan, Jalisco Mexico +52.33.30037400 info.latinamerica@dorner.com